Electronic Services - Los Angeles
M17671X

LAB COPY

# GOULD 5900 CARD CAGE
# ALL MODELS
# OPERATING AND SERVICE MANUAL

MP MASTER
MA34621

GOULD

GOULD
Electronics

8-A-6-F
MANUAL PART NO.
M11-4183-03

# GOULD 5900 CARD CAGE
# ALL MODELS
# OPERATING AND SERVICE MANUAL

The information contained herein is the exclusive property of Gould Inc., except as otherwise indicated and shall not be reproduced in whole or in part without explicit written authorization from the company. The distribution of this material outside the company may occur only as authorized by the company in writing.

All information contained in this manual is the latest product information available at the time of printing. The right is reserved to make changes at any time without notice.

PRINTED Nov, 87
COPYRIGHT 1987

**Gould Inc., Recording Systems Division**
3631 Perkins Ave., Cleveland, Ohio 44114

1ST PRINTING
PRINTED IN U.S.A.

GOULD
Electronics

# WARRANTY

All products manufactured and sold by Gould Inc., Test and Measurement Group are warranted to conform to the applicable published specification in effect at the time of shipment, and to be free from defects in material or manufacture for the applicable period set forth in the table below, when used with recommended Gould associated equipment and/or supplies. If any such product proves defective during the applicable warranty period, Gould, at its option, will either repair the defective product without charge for parts and labor or provide a replacement in exchange for the defective product.

The obligations of Gould or its designated service centers with respect to the provisions of this warranty are expressly limited to the original purchaser and the country of initial purchase unless otherwise agreed and stated in the terms and conditions of any order for products accepted by Gould.

In order to obtain service under this warranty, Buyer must notify Gould or its designated service center of the defect before the expiration of the warranty period and make suitable arrangements for either the return of the defective product or on-site performance of service. Buyer shall be responsible for packaging and shipping the defective product, transportation prepaid, to Gould's designated service center. Gould will provide on-site performance of warranty service only upon prior agreement and subject to payment of an additional charge by Buyer. Warranty work is performed Monday thru Friday, 8:00 a.m. to 5:00 p.m.

Gould reserves the right to determine the cause and existence of a defect under this warranty and this warranty shall not apply to any products which have been subjected to misuse, improper installation, repair, alteration, neglect, accident, inundation, fire or operation outside their published maximum ratings.

| Product Category | Warranty Period |
|---|---|
| Analog & Digital Oscilloscopes | 2 YEARS from date of shipment |
| Logic Analyzers*, Oscillographic Recorders, Strip Chart Recorders, Array Recorders, Waveform Recording Products, DASA Data Acquisition (AT computers), DASA Data Acquisition (Accessories), Analog XY Recorders, Monitor Scopes & Digital Displays, Chart Paper. | 1 YEAR from date of shipment |
| Digital Plotters | 6 MONTHS from date of shipment |

*Except for disk drive memory storage devices which are warranted for 90 days

GOULD'S LIABILITY UNDER SUCH WARRANTY IS LIMITED TO SERVICING OR REPLACING DEFECTIVE PARTS EXCEPT PENS, STYLI, FUSES, BATTERIES AND CATHODE RAY TUBES, AND DOES NOT INCLUDE CALIBRATION AND MINOR MAINTENANCE AS OUTLINED IN GOULD OPERATING MANUALS. IN NO EVENT SHALL GOULD BE LIABLE UNDER ANY CIRCUMSTANCES, FOR ANY LOSS OF PROFITS OR OTHER CONTINGENT, CONSEQUENTIAL OR SPECIAL DAMAGES. THE FOREGOING WARRANTY IS EXCLUSIVE AND EXPRESSLY IN LIEU OF ALL OTHER WARRANTIES WHETHER EXPRESSED OR IMPLIED, INCLUDING ANY IMPLIED WARRANTIES OF MERCHANTABILITY OR FITNESS OF ANY OTHER OBLIGATION AND SHALL CONSTITUTE THE SOLE REMEDY OF THE BUYER AND SOLE LIABILITY OF GOULD.

Gould offers an Extended Warranty Agreement for all its products, along with calibration traceable to NBS. Please contact the Service Center listed on the following pages for details before your warranty expires.

REPLACEMENT PARTS: Warranty is same as above except ninety (90) days from date of shipment.

If a defect occurs, notify your nearest Gould Service Center giving full details of the difficulty, and include the product model number, and serial number. On receipt of this information, service data or shipping instructions will be provided.

Compliance with the above procedure will assure the earliest repair and return of your equipment.

Digitized by the Internet Archive
in 2025

https://archive.org/details/manualsplus_09927

Gould instruments are individually tested and calibrated before shipment to assure dependability and verify their accuracy. To this procedure must be added an unseen ingredient of prime importance to you: The Gould concept of continuing service. Gould responsibility for each instrument sold covers far more than its delivery. Of equal concern is the equipment's suitability for its intended purpose, its correct installation, instruction of operating personnel -- plus future servicing and maintenance. The Gould Field Service Department offers customers any or all of these services:

**Field Service**

- Installation
- Field maintenance
- NBS Certification

**Training**

- Instruction of operators
- On-site training seminars
- Formal Training courses

**Service Contracts**

- Fixed Fee
- Time and Material
- Extended Warranty

**Our Seal of Pride** Gould Inc., Recording Systems Division, and its predecessor organizations tracing back to Charles F. Brush, have been preeminent in instrumentation development since the 1920's. Among Gould's many achievements is a series of the world's best performing, most versatile, and reliable direct writing recording systems.

Today, Gould recorders and signal conditioners are the overwhelming choice for recording analog signals in the most critical industrial, scientific, and biophysical measurement applications. Whether recording the faintest life signals of a patient in a hospital operating room or the most critical variables in the lab or on the production line, you can depend on the accuracy, faithfulness, clarity, and permanence of the traces made by Gould recorder.

Innovative design, coupled with highest quality, are hallmarks of all Gould products.

**The Field Service Engineer** Gould field service engineers provide on-the-spot assistance whenever and wherever it is required. While every field service engineer is the product of intensive and thorough factory training, you will find that his greatest strength evolves from field experience and his knowledge of your objectives. He is aware of your problems, is willing and able to assist you in their solution, and is backed by the nation's most experienced organization in recording instrumentation.

Our field service engineers and technicians are daily engaged in the installation, testing, maintenance, repair and inspection of Gould recording systems all over the country. They can provide you with any information about our instruments you may require; if not, they will find the answer to your problem.

**Overhaul and Repair** Because we service only our own products, our customers can feel confident of prompt, effective results when they turn to Gould Factory Service Centers.

The repair service these centers provide is of particular appeal to those companies that do not operate an instruments repair facility of their own. By designating the nearest Gould Service Center as its maintenance depot, a Gould-equipped company is assured the best chance for continuity of recording instrumentation.

Many companies with their own repair facilities find it more convenient and more truly economical to have their Gould equipment repaired by service contract with the closest Service Center. In addition to enjoying fast turn-around, these companies are spared the expense of carrying an inventory of recorder parts, accessories, and supplies.

**Calibration and Certification** A small, quiet room in the Standards and Calibration Section at the Gould plant in Cleveland contains precision reference standards just one step removed from the prime reference measurement standards of the United States -- at the National Bureau of Standards in Washington. Included in this room, which is temperature-controlled within one degree and has a constant relative humidity of 40%, are standards for voltage, frequency (derived from the atomic vibration of caesium), resistance, capacitance -- in fact all basic parameters of electrical measurement. The room is maintained under stabilized conditions 365 days a year.

The calibration practice of all Gould Service Centers is directly traceable to the National Bureau of Standards. We can supply complete calibration for any Gould equipment, and we can also certify to manufacturer's specifications followed by a letter of certification when required.

**Training** The Gould field service engineer will hold short training courses either on the job or at his facility. On-the-job training is usually a brief, informal session with the people who will actually be operating the Gould equipment.

Formal classroom training is more complete: detailed information, a thorough review of underlying theory, training devices, demonstration of problem solving and examination of students to determine their understanding and proficiency is accomplished at our Cleveland plant.

**Contracts** Customer companies requiring temporary or permanent service are afforded contract arrangements by which agreed-upon maintenance, repair, upgrading and calibration services are performed on a routine basis. Service contracts are now in effect with a number of customers, affording substantial saving in time and money.

Owing to the various requirements of each customer, we do not reproduce here a standard boilerplate agreement -- which might contain too much or too little. Instead, we tailor each contract to a particular customer's needs. This practice has singlehandedly produced substantial savings in time and money for others, and it can do the same for you.

An extended warranty is available at the point of sale allowing a regulated budget for the first two years of ownership. You may take advantage of this warranty within the first year of ownership at a percentage of the current listed price.

# GOULD INC., TEST and MEASUREMENT SALES/SERVICE DIVISION (TMSD) BRANCHES

## UNITED STATES

***Albuquerque,NM (Mailing Address)**
P.O. Box 13494
Albuquerque, NM 87192
Phone: (505) 292-4063

***Albuquerque, NM (Shipping Address)**
11000 Candelaria N.E.
Suite 111W
Albuquerque, NM 87112
Phone: (505) 292-4063

**Atlanta, GA.**
5300 Oakbrook Parkway
Suite 330
Norcross, GA 30093
Phone: (404) 279-1652 (Sales)
Phone: (404) 279-2043(Service)

**Boston, MA.**
Middlesex Technology Center
Building No. 5
900 Middlesex Turnpike
Billerica, MA 01821
Phone: (617) 667-8550

**Chicago, IL**
40 Gould Center
Rolling Meadows, Il 60008
Phone: (312) 640-4378 (Service)
Phone: (312) 640-4135 (Sales)

**Cleveland, OH.**
3631 Perkins Avenue
Cleveland, OH 44114
Phone (216) 361-3315
Twx: (810) 421-8580
Telex: 196113 (via TRT)
Fax: (216) 881-4256
Toll Free: (800) 321-3029

**Cupertino, CA.**
19050 Pruneridge Avenue
Cupertino, CA 95014
Phone: (408) 864-7732 (Service)
Phone:(408) 864-7733 (Sales)
Headqtrs (408) 864-7711 (Sales)
Headqtrs. (408) 988-6800 (Service)
FAX: (408) 988-1647
TWX: (910) 338-0509

***Dallas, TX.**
4230 LBJ Freeway
Suite 122
Dallas, TX 75244
Phone: (214) 991-8229

**Dayton, OH.**
432 Windsor Park Drive
Centerville, OH 45459
Phone: (513) 433-9586

## UNITED STATES (cont.)

**Denver, CO.**
8480 East Orchard Road,
Suite 1200
Englewood, Co. 80111
Phone: (303) 741-4600

**Detroit, MI.**
32307 Mally Road
Madison Hts., MI. 48071
Phone: (313) 588-4024

**Houston, TX**
10500 Northwest Freeway
Suite 185
Houston, TX 77092
Phone: (713) 680-3995

**Los Angeles, CA.**
16310 Arthur Street
Cerritos, CA 90701
Phone: (213) 404-1919
TWX: 910-583-1365

***Minneapolis**
Westview Business Center
620 Mendelssohn
Minneapolis, MN 55427
Phone: (612) 544-0594
Phone: (612) 544-5253

**New York Metro**
405 Murray Hill Parkway
East Rutherford, NJ 07073
Phone: (201) 935-1717

**Orlando, FL**
774 North Lake Blvd.
Altamonte Springs, FL 32701
Phone: (305) 830-0695

***Phoenix**
1525 N. Hayden #4
Scottsdale, AZ 85257
Phone: (602) 990-8212

**Pittsburgh, PA.**
585 Rugh Street , Suite A
Greensburgh, Pa. 15601
Phone: (412) 838-7700

**Rochester, NY.**
30 Corporate Woods
Suite 215
Rochester, NY 14623
Phone: (716) 272-0414

***St. Louis**
244 Cross Keys Shopping Center
Florissant, MO 63033
Phone: (314) 921-3444

## UNITED STATES (cont.)

***Seattle (Mailing Address)**
P.O. Box 3068
Redmond, WA 98073-3068
Phone: (206) 882-7525

***Seattle (Shipping Address)**
16150 N.E. 85th
Suite 217
Redmond, WA 98073-3068
Phone: (206) 882-7525

**Washington, D.C.**
6301 Ivy Lane
Suite 106
Greenbelt, MD. 20770
Phone: (301) 345-0050

## CANADA

**CALGARY,AB**
Allan Crawford Associates, Ltd
6815 - 8 Street, N.E., Suit 135
Calgary, Alberta T2E 7H7
Phone: (403) 295-0822
Fax: (403) 295-0911

**Montreal, PQ**
Allan Crawford Associates, Ltd
6505 Trans Canada Highway
suite 300
St. Laurent, P.Q. H4T 1S3,
Phone: (514) 731-8564
Fax: (514) 747-5673

**Ottawa, ON.**
Allan Crawford Associates, Ltd
2625 Queensview Drive
Ottawa, Ontario K2P 8K2
Phone: (613) 596-9300
Fax: (613) 596-3081

**Toronto, ON.**
Allan Crawford Associates., Ltd.
5835 Coopers Avenue
Mississauga, On L4Z 1Y2
Phone: (416) 890-2010
Fax: (416) 890-1959

**Vancouver, BC**
Allan Crawford Associates, Ltd.
212 Brooksbank Avenue, #410
North Vancouver, -
British Columbia V7J 2C1
Phone: (604) 988-2195
Fax: (604) 980-5892



*INDICATES SALES OFFICES ONLY

The following information is intended to alert the user to possible dangers and important information contained in this manual. The "WARNINGS" and "CAUTIONS" do not eliminate the dangers that they signal. Close attention to the information supplied plus "common sense" operation are the major accident prevention measures.

| | |
|---|---|
| **WARNING:** | **Failure to follow this warning may result in bodily injury.** |

| | |
|---|---|
| **CAUTION:** | **Failure to follow this caution may result in possible damage to the product or equipment.** |

# TABLE OF CONTENTS


| SECTION | TITLE | PAGE |
|---|---|---|
| I | **GENERAL INFORMATION** | |
| 1.1 | Scope of Manual | 1-1 |
| 1.2 | Description | 1-1 |
| 1.3 | Specifications | 1-2 |
| 1.4 | Accessories | 1-2 |
| II | **INSTALLATION** | |
| 2.1 | Introduction | 2-1 |
| 2.2 | Initial Inspection | 2-1 |
| 2.3 | Power Requirements | 2-1 |
| 2.4 | Environment Requirements | 2-1 |
| 2.5 | Amplifier Installation | 2-1 |
| 2.5.1 | Insertion | 2-1 |
| 2.5.2 | Removal | 2-3 |
| 2.6 | Signal Connections | 2-3 |
| 2.6.1 | Input | 2-3 |
| 2.6.2 | Output | 2-3 |
| 2.7 | Recorder Interface Board Connection | 2-4 |
| 2.8 | Installation of Optional Kits | 2-4 |
| 2.9 | Rack Mounting | 2-4 |
| 2.10 | Outline Dimensions - Rack Mount and Portable | 2-4 |
| III | **OPERATION** | 3-1 |
| IV | **THEORY OF OPERATION** | |
| 4.1 | Introduction | 4-1 |
| 4.2 | General | 4-1 |
| 4.3 | Electronic Operation | 4-1 |
| V | **MAINTENANCE** | |
| 5.1 | Introduction | 5-1 |
| 5.2 | Operative Maintenance | 5-1 |
| 5.2.1 | AC Line Fuse/Voltage Selector Change | 5-1 |
| 5.2.2 | Individual Slot Fuses | 5-1 |
| 5.3 | Preventive Maintenance | 5-3 |
| 5.3.1 | Exterior | 5-3 |
| 5.3.2 | Interior | 5-3 |
| 5.4 | Calibration | 5-3 |
| 5.5 | Troubleshooting | 5-5 |
| 5.6 | Subassembly Replacement | 5-7 |

# TABLE OF CONTENTS


| SECTION | TITLE | PAGE |
|---|---|---|
| VI | PARTS IDENTIFICATION | |
| 6.1 | General | 6-1 |
| APPENDIX A | | |
| | SCHEMATIC DRAWINGS | A.1 |


# LIST OF FIGURES


| FIGURE | DESCRIPTION | PAGE |
|---|---|---|
| 2-1 | 5900 FRAME - (REAR VIEW) | 2-2 |
| 2-2 | RACK MOUNT KIT | 2-5 |
| 2-3 | PORTABLE KIT | 2-6 |
| 5-1 | SWITCHER POWER SUPPLY | 5-2 |
| 5-2 | MOTHER BOARD | 5-4 |
| 5-3 | SUBASSEMBLY REPLACEMENT | 5-6 |
| 6-1 | 5900 SIGNAL CONDITIONER FRAME | 6-4 |
| 6-2 | 5900 FRAME (INSIDE VIEW) | 6-5 |
| 6-3 | SHELF ASSY., BOTTOM (PREMIMUM FRAME ONLY) | 6-7 |
| 6-4 | MOTHER BOARD | 6-9 |
| 6-5 | DISTRIBUTION BOARD | 6-11 |
| 6-6 | TRANSFORMER ASSEMBLY | 6-13 |
| 6-7 | 3000 RECORDER INTERFACE KIT | 6-15 |
| 6-8 | MEDICAL BOARD KIT | 6-17 |


# LIST OF TABLES


| TABLE | DESCRIPTION | PAGE |
|---|---|---|
| 2-1 | MEDICAL BOARD | 2-3 |
| 2-2 | RECORDER INTERFACE BOARD | 2-4 |

# SECTION I

# GENERAL INFORMATION

## 1.1 SCOPE OF MANUAL

This manual contains operating and installation instructions for the Gould 5900 Signal Conditioner Frame (P/N CL-810231 OR CL-810232) and associated accessory kits. Descriptive information and specifications are also included, as are sections covering service, maintenance, theory of operation, and parts identification.

For service and repair information contact your local Gould representative at the nearest location listed in the front of this manual.

## 1.2 DESCRIPTION

The 5900 Signal Conditioner frame is of modular design to facilitate production of a family of products. Both the CL-810232 (standard frame) and CL-810231 (premium frame) were designed for both the 4600 and 5600 line of signal conditioners; however, only the premium frame will support the 5600 with status option or 5600 programmable signal conditioners. The premium frame provides forced air cooling required by the 5600 programmable signal conditioners. Both frames are designed so signal conditioners are retained and removed by an ejector from the front panel.

The 5900 frame provides signal conditioner outputs via individual BNC connectors or Medical Output board. It is also supplied with an additional BNC connector for a sync clock input. From the Medical Output board, it makes available all the medical and auxiliary analog output signals from each individual signal conditioner.

This frame has been designed to "nest" on top of Gould's 3600, 3800, or TA2000 chart recorders or the Gould 5300 waveform recorder. It is offered in a portable or rack mounted version.

The 5900 has a proprietary board, Recorder Interface board, which can be connected to any 3000 series recorder via the 5900/3000 cable. The 3 ft. CL-311222-1 or the 6 ft. CL-311222-2 cable assembly options makes this connection complete. The Recorder Interface board passes all the signal conditioner's recorder-output signals over to the recorder. With the Interpreter Board option and the appropriate signal conditioner configuration (5600 with status board option), this interface also passes signal conditioner status information to be printed on the recorder's chart, interchannelly.

All operations of the signal conditioners can be done manual via their front panel controls. With the 5600 programmable amplifiers, the premium frame adds the versatility of remote control from a computer terminal when configured with the Interpreter Board option and the RS-232C or IEEE-488 option kits. Remote control is also possible without the RS232C or IEEE-488 option kits, via the Recorder Interface board; however, in this case, the recorder must have RS-232 or IEEE-488 options.

The RS-232C and the IEEE-488 Interface options to the 5900 include the Interpreter board.

## 1.3 SPECIFICATIONS

PHYSICAL CHARACTERISTICS (chassis only)

DIMENSIONS:

| | |
|---|---|
| WIDTH | 19.0" (482.6 mm) |
| HEIGHT | 7.0" (177.8 mm) |
| DEPTH | 18.0" (457.20 mm) |
| WEIGHT | 19.0 lbs. (8.62 Kg) |
| FINISH | 2 tone corporate gray |
| MOUNTING | Rack or Portable |
| VENTILATION: | |
| CL-810232 CHASSIS | (1) 25 CFM, minimum, fan for power supply cooling |
| CL-810231 CHASSIS | (1) 25 CFM, minimum, fan for power supply cooling and (4) 20 CFM, minimum, fans for amplifier cooling. One per every two channels. |
| SIGNAL CONDITIONER RETENTION | Front panel amplifier retention with ejector and locking screw. One per channel. |

## 1.4 ACCESSORIES

| | |
|---|---|
| Interpreter Board Kit | 11-4221-01 |
| RS-232C Interface Kit | 11-4221-03 |
| IEEE-488 Interface Kit | 11-4221-04 |
| Recorder Interface Kit | 11-4221-06 |
| Digital I/O Board Kit | 11-4221-05 |
| Auxiliary Analog Board Kit | 11-4221-02 |
| Line Fuses: | |
| @ 115 VAC | 116198-13 |
| @ 230 VAC | 116198-11 |
| Slot Fuses | 102625-7 |

# SECTION II

# INSTALLATION

## 2.1 INTRODUCTION

This section describes initial inspection checks and installation procedures for the Gould 5900 Signal Conditioner Frame.

## 2.2 INITIAL INSPECTION

Prior to attempting any electrical connections or operation, visually examine the signal conditioner frame for broken or loose panels, dented or nicked panels and broken or chipped rear input connectors. Make sure you read the Concealed Damage Card (Form No. 222640) which is enclosed in the shipping carton.

## 2.3 POWER REQUIREMENTS

The 5900 series frame can operate at voltages from 90 to 132 VAC by selecting "115" or 180 to 264 VAC by selecting "230". If the input voltage selector is changed, you must also change the line fuse (see Section 5.2 for details). For the "115" selector, a 250 VAC 3.0 amp fuse (P/N 116198-13) is used and for the "230" selector, a 250 VAC 1.5 amp fuse (P/N 116198-11) is used. The current selection is displayed in a window just above the line cord.

## 2.4 ENVIRONMENTAL REQUIREMENTS

| | |
|---|---|
| Operating Temperature ..... | 0 to 50 degrees celsius |
| Storage Temperature ..... | -40 t +70 degrees celsius |
| Humidity ..... | 10% to 90% relative humidity at 65 degrees Fahrenheit, non-condensing |
| Shock and Vibration ..... | IEC-348 Section 11.3 |
| Static Insensitivity ..... | IEC Class 2 |

## 2.5 AMPLIFIER INSTALLATION

### 2.5.1 Insertion

The following is the procedure to insert a signal conditioner into its appropriate slot:

a. Unscrew ejector screw and slide ejector out as far as it will go.

b. Slide the signal conditioner into the slot until the conditioner's front panel is flush with the 5900 front plate.

**CAUTION: DO NOT FORCE THE SIGNAL CONDITIONER INTO THE SLOT. YOU MAY HAVE RESISTANCE BECAUSE THE CONDITIONER'S CARD EDGE CONNECTOR IS NOT ALIGNED WITH THE BACK SLOT OF THE 5900 FRAME. TO LINE THEM UP JIGGLE THE AMPLIFIER.**

FIGURE 2-1
5900 FRAME - (REAR VIEW)

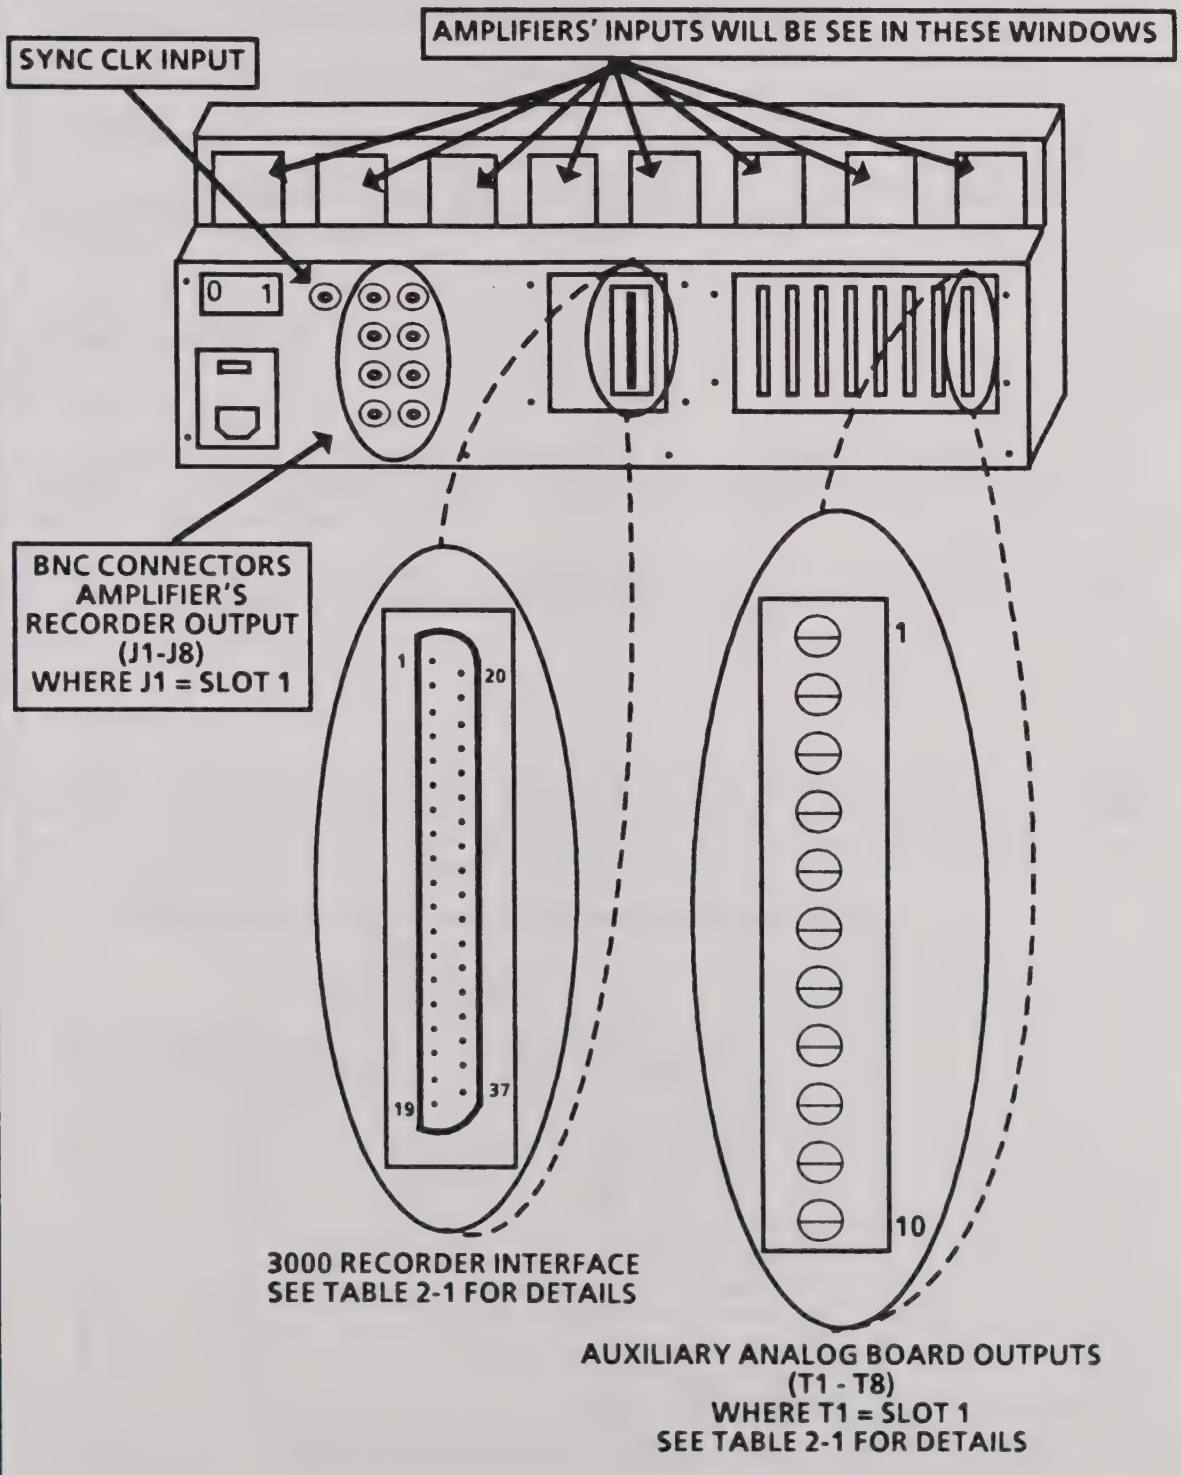

c. Tighten ejector screw.

### 2.5.2 Removal

The following is the procedure to remove a signal conditioner:

a. Disconnect the input signal connector.

b. Unscrew ejector screw.

c. To remove the conditioner pull on the ejector. This will push the conditioner out enough for you to pull it out by hand.

## 2.6 SIGNAL CONNECTIONS

### 2.6.1 Input

**NOTE: In most cases, a special connector is provided with the signal conditioner for signal input connections. See the particular conditioner manual for the proper part number.**

Connections to the conditioner are made at the rear of the frame (see Figure 2-1). See the signal conditioner manual for instructions on connections and types of cable to use.

### 2.6.2 Output

The conditioner's recorder output signals are located in the rear of the 5900 frame. They are the BNC connectors J1 thru J8 (J1 is for slot 1, etc.). Other output pins from the conditioner are available via the Medical Board kit (see Figure 2-1 and Table 2-1 for details).

TABLE 2-1
MEDICAL BOARD

| MEDICAL BOARD (T1-T8) SCREW NUMBER | AMPLIFIER 16-PIN CARD EDGE CONNECTOR |
|---|---|
| 1 | 2 (CHA RECORDER OUT) |
| 2 | A CHB common |
| 3 | B CHB out |
| 4 | C CHA alarm High |
| 5 | D CHA alarm low |
| 6 | E CHA aform com. |
| 7 | F CHB alarm Hig |
| 8 | H CHB alarm low |
| 9 | J CHB alarm com. |
| 10 | 5 (SIGNAL COMMON) |

## 2.7 RECORDER INTERFACE BOARD CONNECTION

The 37 pin D-shell connector on the Recorder Interface board allows the 5900 to pass the signal conditioner's recorder output signals to, and to directly communicate with the 3000 series recorders (see Figure 2-1). The connection is made available by either a 3 ft. or 6 ft. cable. The pin-outs for this port are described in Table 2-2.

TABLE 2-2
RECORDER INTERFACE BOARD

| PIN | ASSIGNMENT | PIN | ASSIGNMENT |
|---|---|---|---|
| 1 | COMMON CH 1 | 20 | SIGNAL CH 1 |
| 2 | COMMON CH 2 | 21 | SIGNAL CH 2 |
| 3 | COMMON CH 3 | 22 | SIGNAL CH 3 |
| 4 | COMMON CH 4 | 23 | SIGNAL CH 4 |
| 5 | COMMON CH 5 | 24 | SIGNAL CH 5 |
| 6 | COMMON CH 6 | 25 | SIGNAL CH 6 |
| 7 | COMMON CH 7 | 26 | SIGNAL CH 7 |
| 8 | COMMON CH 8 | 27 | SIGNAL CH 8 |
| 9 | n/c | 28 | DCOMM |
| 10 | n/c | 29 | DCOMM |
| 11 | n/c | 30 | SCSR |
| 12 | PB0 | 31 | SCACK |
| 13 | PB1 | 32 | RECSR |
| 14 | PB2 | 33 | RECACK |
| 15 | PB3 | 34 | DCOM |
| 16 | PB4 | 35 | DCOM |
| 17 | PB5 | 36 | DCOM |
| 18 | PB6 | 37 | DCOM |
| 19 | PB7 | | |

## 2.8 INSTALLATION OF OPTIONAL KITS

The installation of each kit is described in its separate appendix. To install a kit the top-rear cover on the 5900 frame must first be removed. If the 5900 frame is in a portable case, you must first remove the top cover of the case. This cover pops right off.

## 2.9 RACK MOUNTING

Refer to Figure 2-2 for rack mounting the 5900 Signal Conditioner Frame via the Rack Mount kit.

## 2.10 OUTLINE DIMENSIONS - RACK MOUNTED AND PORTABLE

Refer to Figure 2-2 for outline dimensions of the rack mount assembly and Figure 2-3 for the portable case.

# FIGURE 2 - 2
# RACK MOUNT KIT

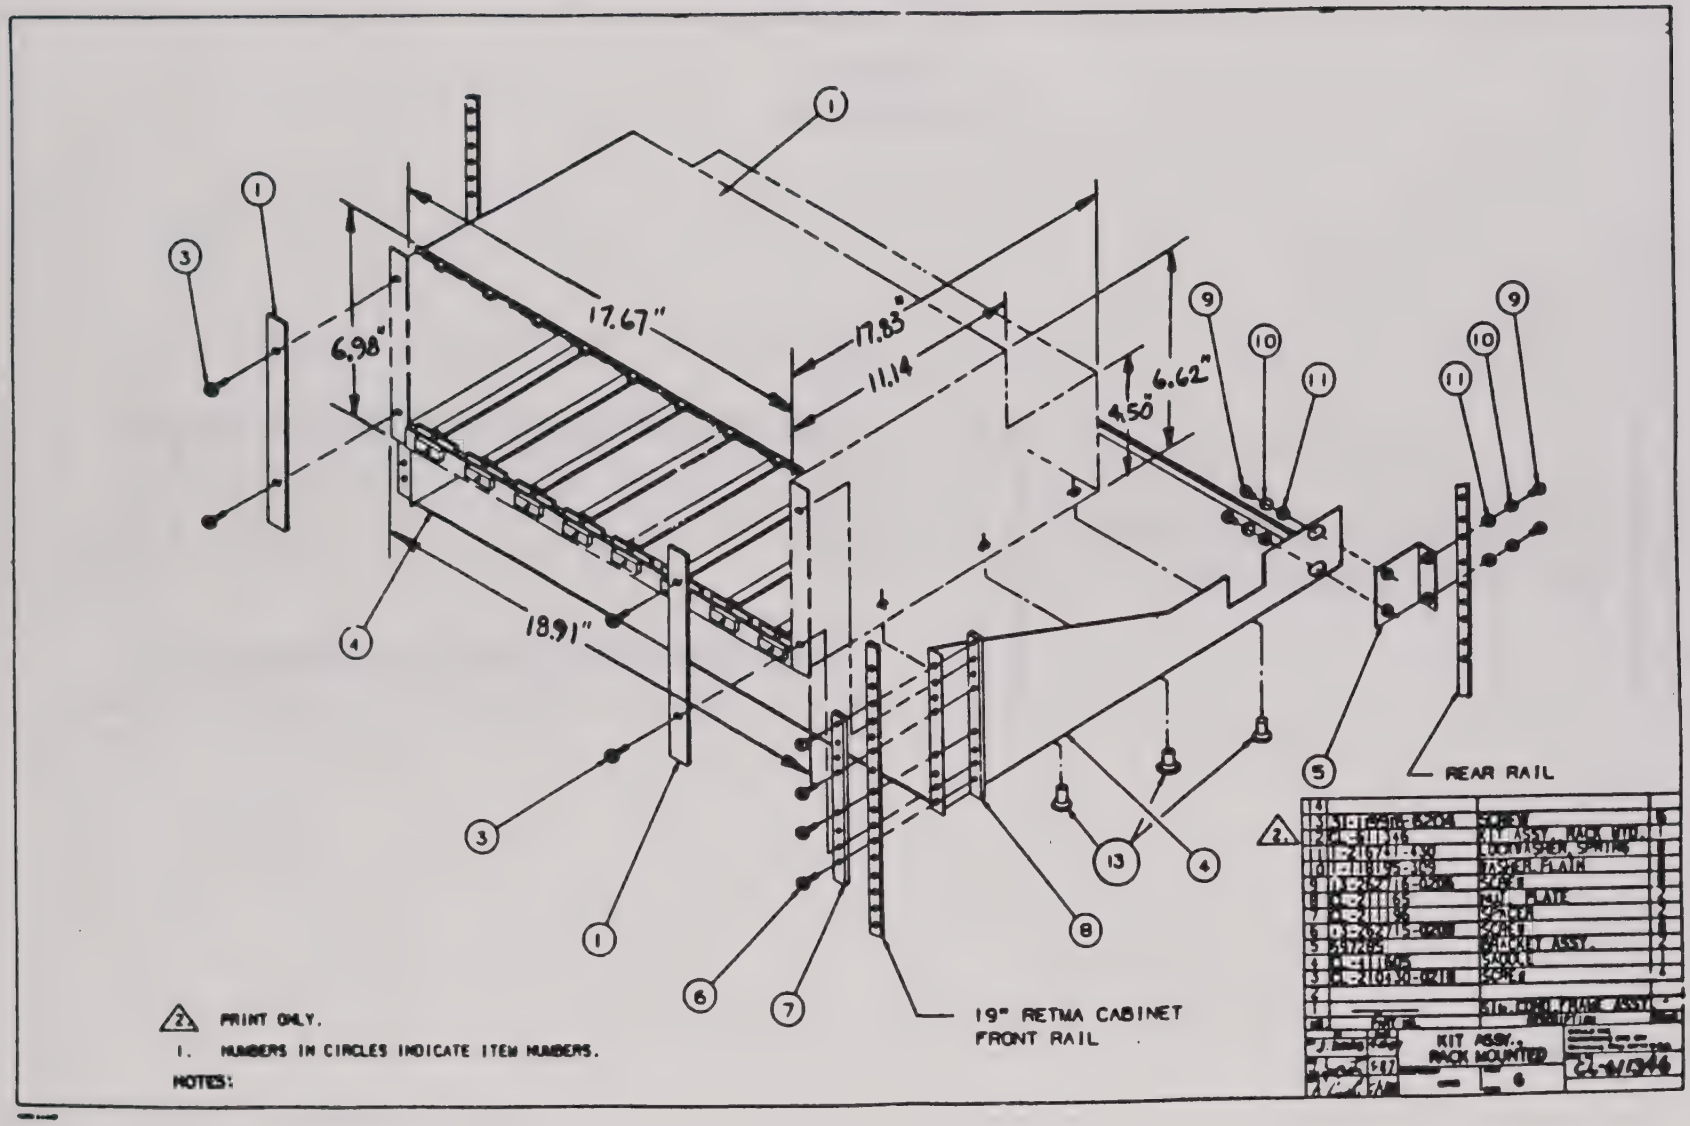

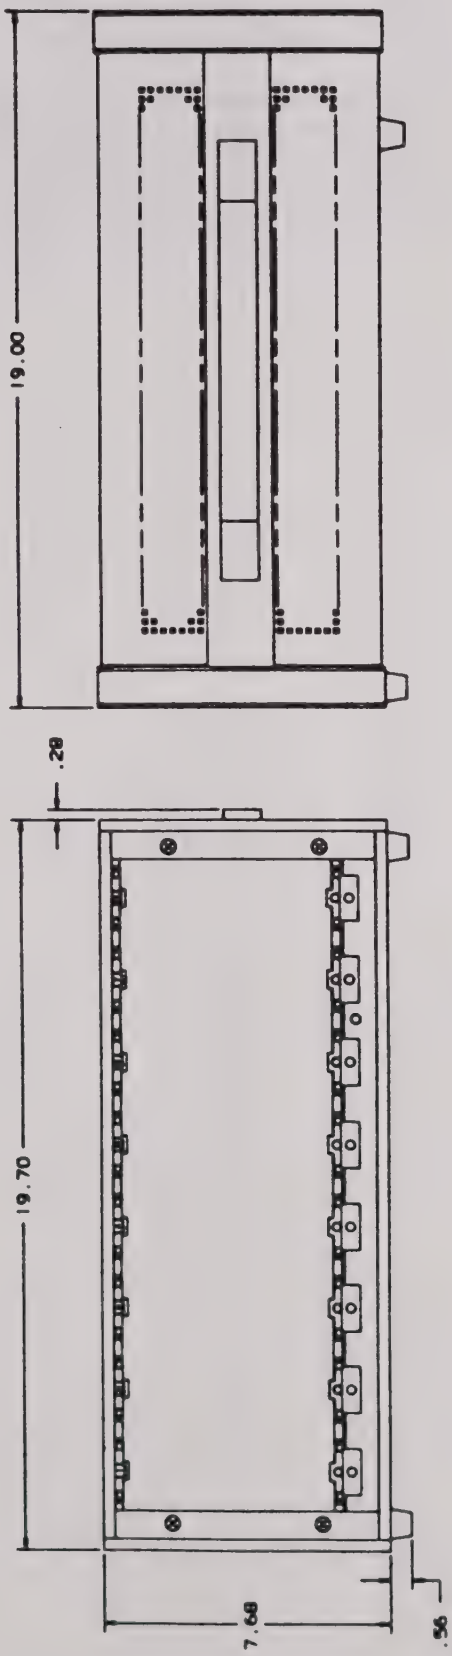


FIGURE 2-3
PORTABLE KIT

# SECTION III

## OPERATION

There are no operator controls for the Gould 5900 frame. If you have the Interpreter Board kit option you will have Appendix B to refer to for remote software commands. For operating instructions on signal conditioners used refer to the conditioner's manual. The power switch is located in the rear. When the frame is on, the pilot light (green LED), which is located in the front of the frame, will be lit.

# SECTION IV

# THEORY OF OPERATION

## 4.1 INTRODUCTION

This section will explain the electronic operation of the Gould 5900 Signal Conditioner Frame.

## 4.2 GENERAL

The 5900 Signal Conditioner Frame can be basically thought of as a "cardcage" for the 4600 and 5600 line of signal conditioners. It accepts up to 8 signal conditioners, provides their power, and provides various types of standard and optional I/O for their interfacing.

The frame consists of a mechanical "cage", that is either enclosed by a portable case or secured to a "saddle" for rack mounting. This cage basically contains 3 sections: the power supply section, the signal and power distribution section, and the cooling section. Refer to the system schematic, CL-211476, for the following explanation.

## 4.3 ELECTRONIC OPERATION

The power supply section consists primarily of 2 main supplies, an AC supply and a DC supply. Line power enters the 5900 through the AC cable assembly. This assembly contains the power entry module, the line filter, the line fuse, and the input voltage selector. Line power enters the power entry module, from the line cord, and passes through the line filter. The filter has been selected to suppress RFI noise with minimum 50/60 hertz leakage. One side of the line, 115 HOT, then passes through the fuse. A single 3A fuse is configured for LO AC operation and a 1.5A fuse is configured for HI AC operation. Both sides of the line are then switched "ON" or "OFF" by a DPST rocker switch. The power is the switched by a voltage selector. Select "230" on the cam for HI AC operation. The power then enters the distribution board assembly through a 5 wire molex connector. A green wire from the power entry module connects the earth ground from the line cord to the chassis at the MT1 on the Distribution Board assembly.

On the distribution board assembly, the AC power goes to 2 places - the primaries of the transformer assembly and the line section of the switching supply. The transformer's secondaries, which provide 13 VAC for each channel on separate windings, are then passed through to the distribution board assembly. On this assembly, one side of each 13 VAC winding is fused. Each fuse is rated at 1A 250 VAC. The 13 VAC taps are then passed on through the distribution board assembly to the mother board assembly where they are delivered to the conditioners on pins 7 and 8 of connectors J11-J18.

The switcher's input is capable of receiving HI and LO AC line voltages. A 2 wire cable from the switcher differentiates the HI and LO voltage selection. These wires need to be shorted together for LO AC line voltages and opened for HI AC line voltages. The shorting or opening of these wires is done automatically by the Power Entry Module. The switcher provides 3 DC outputs: +5, +15 and -15. These outputs are passed to the distribution board. From there, they are passed to where they are use throughout the system.

The distribution board assembly also provides I/O for additional option kits specified in Section I.

All grounds in the 5900 are treated as one. The ground plane inside the distribution board assembly acts as a single node for their connection. Power grounds from the supply, signal grounds from the signals conditioners and I/O, and chassis and earth grounds are all connected there.

The analog outputs from the signal conditioners can be obtained via the BNC connectors, J1 thru J8, located on the rear panel of the 5900. These signals are taken directly from pins 2 and 5 in the cardedge connectors. These connectors are considered the standard I/O and are made up of 8 cable assemblies.

# SECTION V

# MAINTENANCE

## 5.1 INTRODUCTION

This section contains information on preventive maintenance, fuse replacement, calibration, troubleshooting and subassembly replacement.

## 5.2 OPERATIVE MAINTENANCE

This section involves fuse replacement and input voltage changes. The 5900 frame has 2 fuse sections - AC line fuse and individual slot fuses.

**WARNING: TO PREVENT THE POSSIBILITY OF SHOCK HAZARD, ALWAYS BE CERTAIN THE POWER CORD IS DISCONNECTED.**

### 5.2.1 AC Line Fuse/Voltage Selector Change

The AC line fuse is located inside the Power Entry module which is located in the rear of the frame. There are 2 types of fuses for this module. The type of fuse used depends on what is displayed on the Input Voltage selector, which is also located in the Power Entry module (see Section 2.3 for fuse type needed). To replace the fuse (and change Voltage Selector) follow the procedure listed below:

a. Make sure frame switch is turned off and the power cable is removed.

b. Open the Power Entry module by gently prying, with a flat head screw driver, the top of the module's face plate away from the rest of the module. The tip of the screw driver should be mounted in the nitch on top of the module. After prying, the face plate will swing downward.

c. When the module is opened, you will see a fuse housing (has an arrow on it). To remove the housing gently pull outward.

d. Remove old fuse from housing and replace it with a new fuse.

   Note: If fuse is being changed because of changes in line voltage, you must also change the Voltage Selector. To change the Voltage Selector you must remove it from the Power Entry Module, turn it until the new voltage is displayed, and then insert it back it the module.

e. Insert fuse housing back into the module.

f. Close module's face plate.

### 5.2.2 Individual Slot Fuses

On the distribution board assembly, there are 8 fuses. Each slot has a fuse running between it and the 13 VAC coming from the transformer. These fuses are rated at 1A 250 VAC. To replace a fuse you must first remove the top-rear panel (see Section 2.6 for details). If you are facing the front of the frame,

## FIGURE 5-1
## SWITCHER POWER SUPPLY

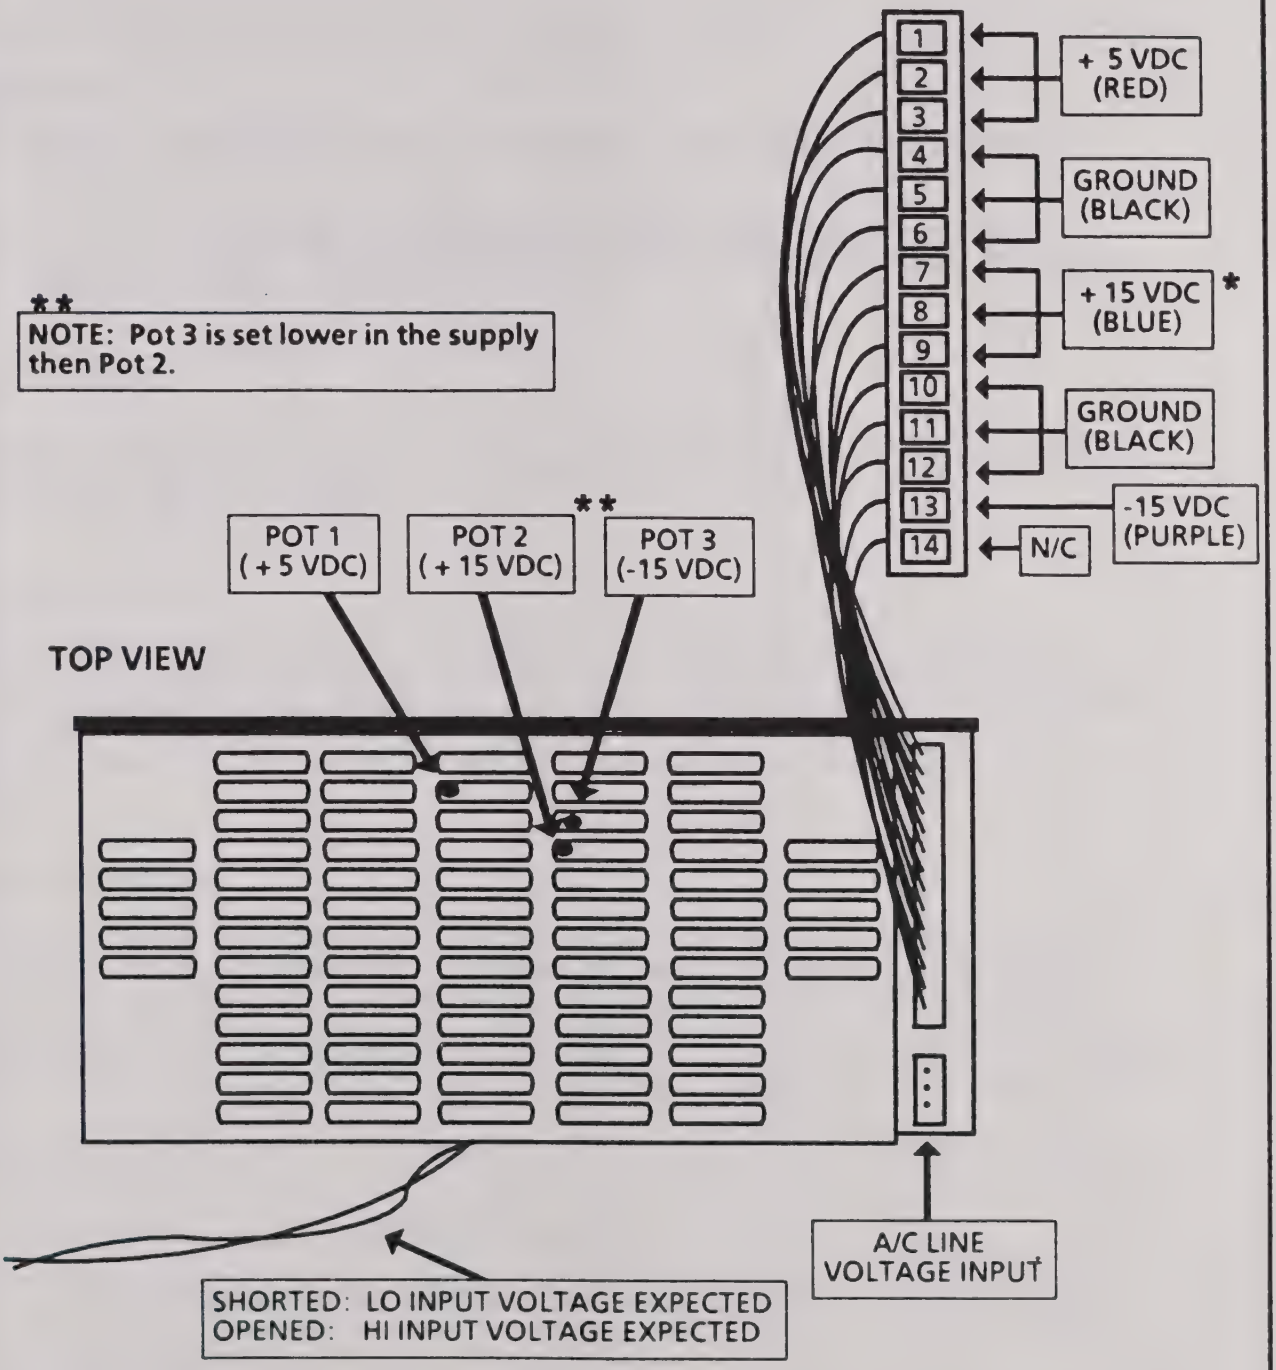


* In early models, the + 15 VDC wires (3 blues) were replaced by one blue wire and a diode. Now, diode is inside supply.

they will be located on the right of the transformer. To avoid shock hazards make sure power cable has been removed.

## 5.3 PREVENTIVE MAINTENANCE

Preventive maintenance is limited to cleaning only.

**CAUTION:**

1. **BEFORE ATTEMPTING TO CLEAN THE 5900 FRAME, TURN POWER OFF AND REMOVE POWER PLUG.**

2. **AVOID USE OF CHEMICAL CLEANING AGENTS WHICH MIGHT DAMAGE PLASTIC OR PRINTED SURFACES. DO NOT USE CHEMICALS WHICH CONTAIN TOLUENE, CELLUSOLVE, ACETONE OR SIMILAR SOLVENTS.**

### 5.3.1 Exterior

Remove loose dust with a soft cloth or small paint brush. Dirt which remains can be removed with a soft cloth dampened in mild detergent and water solution. **DO NOT USE ABRASIVE CLEANERS.**

### 5.3.2 Interior

Dust in the interior should be removed occasionally due to its electrical conductivity under high humidity conditions. Blow off accumulated dust with dry, low pressure air. Remove any dirt which remains with a soft paint brush or a soft cloth dampened in mild detergent and water solution. Use a cotton-tipped applicator for cleaning in narrow spacess and/or printed ciruit boards.

## 5.4 CALIBRATION

The only thing that can be calibrated in the 5900 frame is the switching power supply. The power supply is calibrated at the factory to insure optimum performance. However, calibration may be required due to component aging or whenever the supply is replaced. This section describes and illustrates the procedures necessary to calibrate this supply. Calibration should be performed by qualified personnel only. The only equipment needed is a volt meter.

The following procedure with the help of Figure 5-1 details the calibration of the power supply.

a. Turn the power to the 5900 frame off.

b. Remove top-rear cover (see Section 2.8 for details)

c. Disconnect J76

d. Connect the negative lead of the volt meter to pin 6 of connecter J76.

e. Connect the positive lead of the meter to pin 2 of connecter J76.

## FIGURE 5-2
## MOTHER BOARD

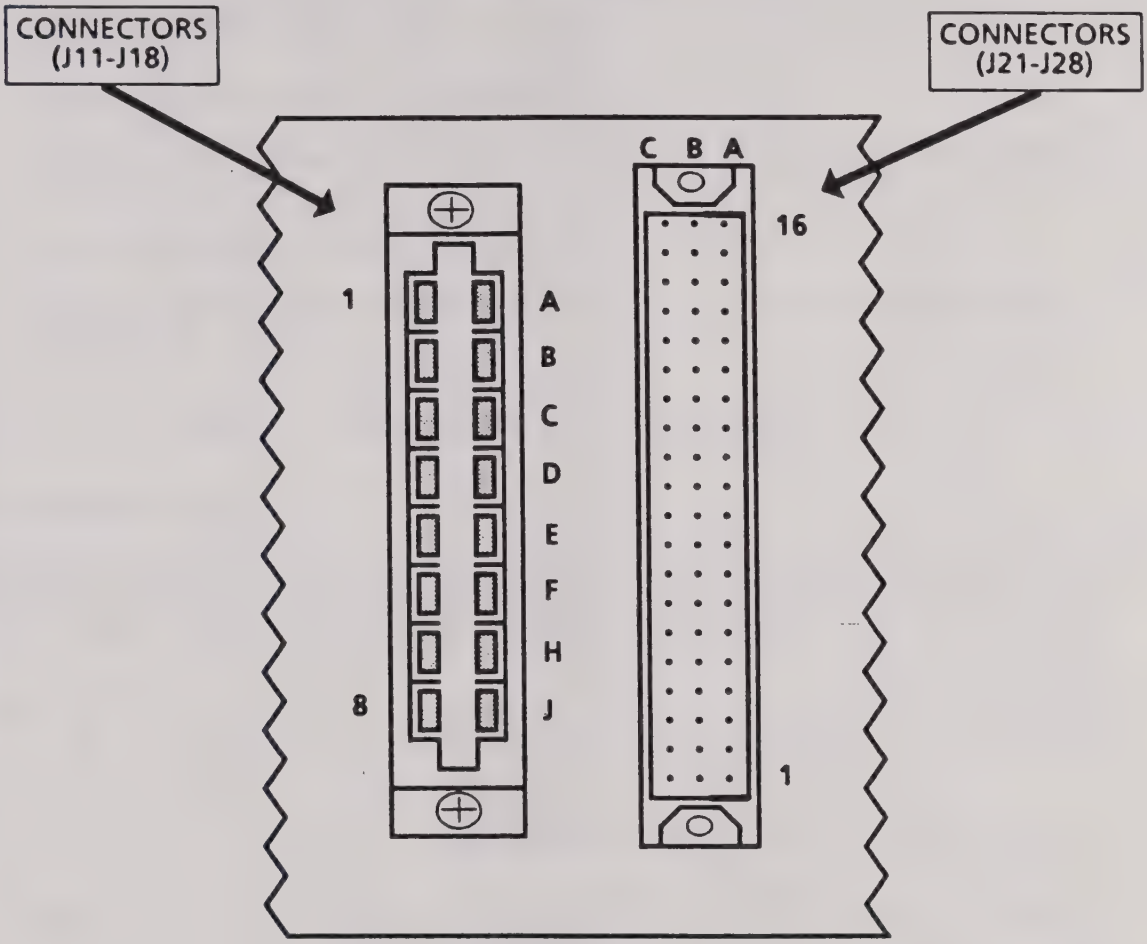


### PIN OUTS - (J11-J18)

| PIN | ASSIGNMENT | PIN | ASSIGNMENT |
|---|---|---|---|
| 1 | Power Common | A | Aux. A |
| 2 | Signal Output | B | Aux. B |
| 3 | -15 VDC | C | Aux. C |
| 4 | + 15 VDC | D | Aux. D |
| 5 | Signal Common | E | Aux. E |
| 6 | N/C | F | Aux. F |
| 7 | 13 VAC | H | Aux. H |
| 8 | 13 VAC | J | Aux. J |

### PIN OUTS - (J21-J28)

| PIN | ROW A | ROW B | ROW C |
|---|---|---|---|
| 1 | Data 0 | Data 8 | N/C |
| 2 | Data 1 | Data 9 | N/C |
| 3 | Data 2 | Data 10 | Slot 0 |
| 4 | Data 3 | Data 11 | Slot 1 |
| 5 | Data 4 | Data 12 | Slot 2 |
| 6 | Data 5 | Data 13 | Slot 3 |
| 7 | Data 6 | Data 14 | CDIN |
| 8 | Data 7 | Data 15 | CDOUT |
| 9 | R/W | N/C | Notify |
| 10 | N/C | N/C | Sync Clock |
| 11 | N/C | MReset | MSync |
| 12 | N/C | Data Req | Data Ack |
| 13 | N/C | Common | Common |
| 14 | N/C | + 5 VDC | + 5VDC |
| 15 | N/C | Common | Common |
| 16 | N/C | Chassis | Chassis |

f. Turn the power to the 5900 frame on. Wait 1 minute for warm up time.

g. The meter should read +5 VDC +/- 4%. If you do not read this, adjust trim pot #1.

h. Move the positive lead of the meter to pin 9.

i. The meter should read +15 VDC +/- 4%. If you do not read this, adjust trim pot #2.

j. Move the positive lead of the meter to pin 14.

k. The meter should read -15 VDC +/- 4%. If you do not read this, adjust trim pot #3.

Calibration is completed. Turn off the power and reconnect J76.

## 5.5 TROUBLESHOUTING

This section contains dignostic information in the event your 5900 is not working correctly (refer to schematic diagrams CL-211476,297582 and 297581, and pin outs described in Section II and Figure 5-2 for help).

Symptom #1: ..... 5900 not working at all (front panel led is off and fan is not running).

Condition: ..... (1) Line fuse is blown.
(2) Switching power supply is defective.

Procedure: ..... (1) Check line fuse (see Section 5.2 for details.
(2) Check to see if the line voltage is going to the suppy and DC (+5,+15,-15 VDC) is leaving the supply.

Symptom #2: ..... LED light is on and fan is running. However, Amplifiers not working properly.

Condition: ..... (1) Defective amplifiers.
(2) Amplifiers are not receiving DC input voltage.
(3) Amplifiers (if applicable) are not receiving 13 VAC input.
(4) Faulty connection between amplifier's output and frame's output connectors (BNC, recorder interface or Medical Output connectors).

# FIGURE 5-3
# SUBASSEMBLY REPLACEMENT

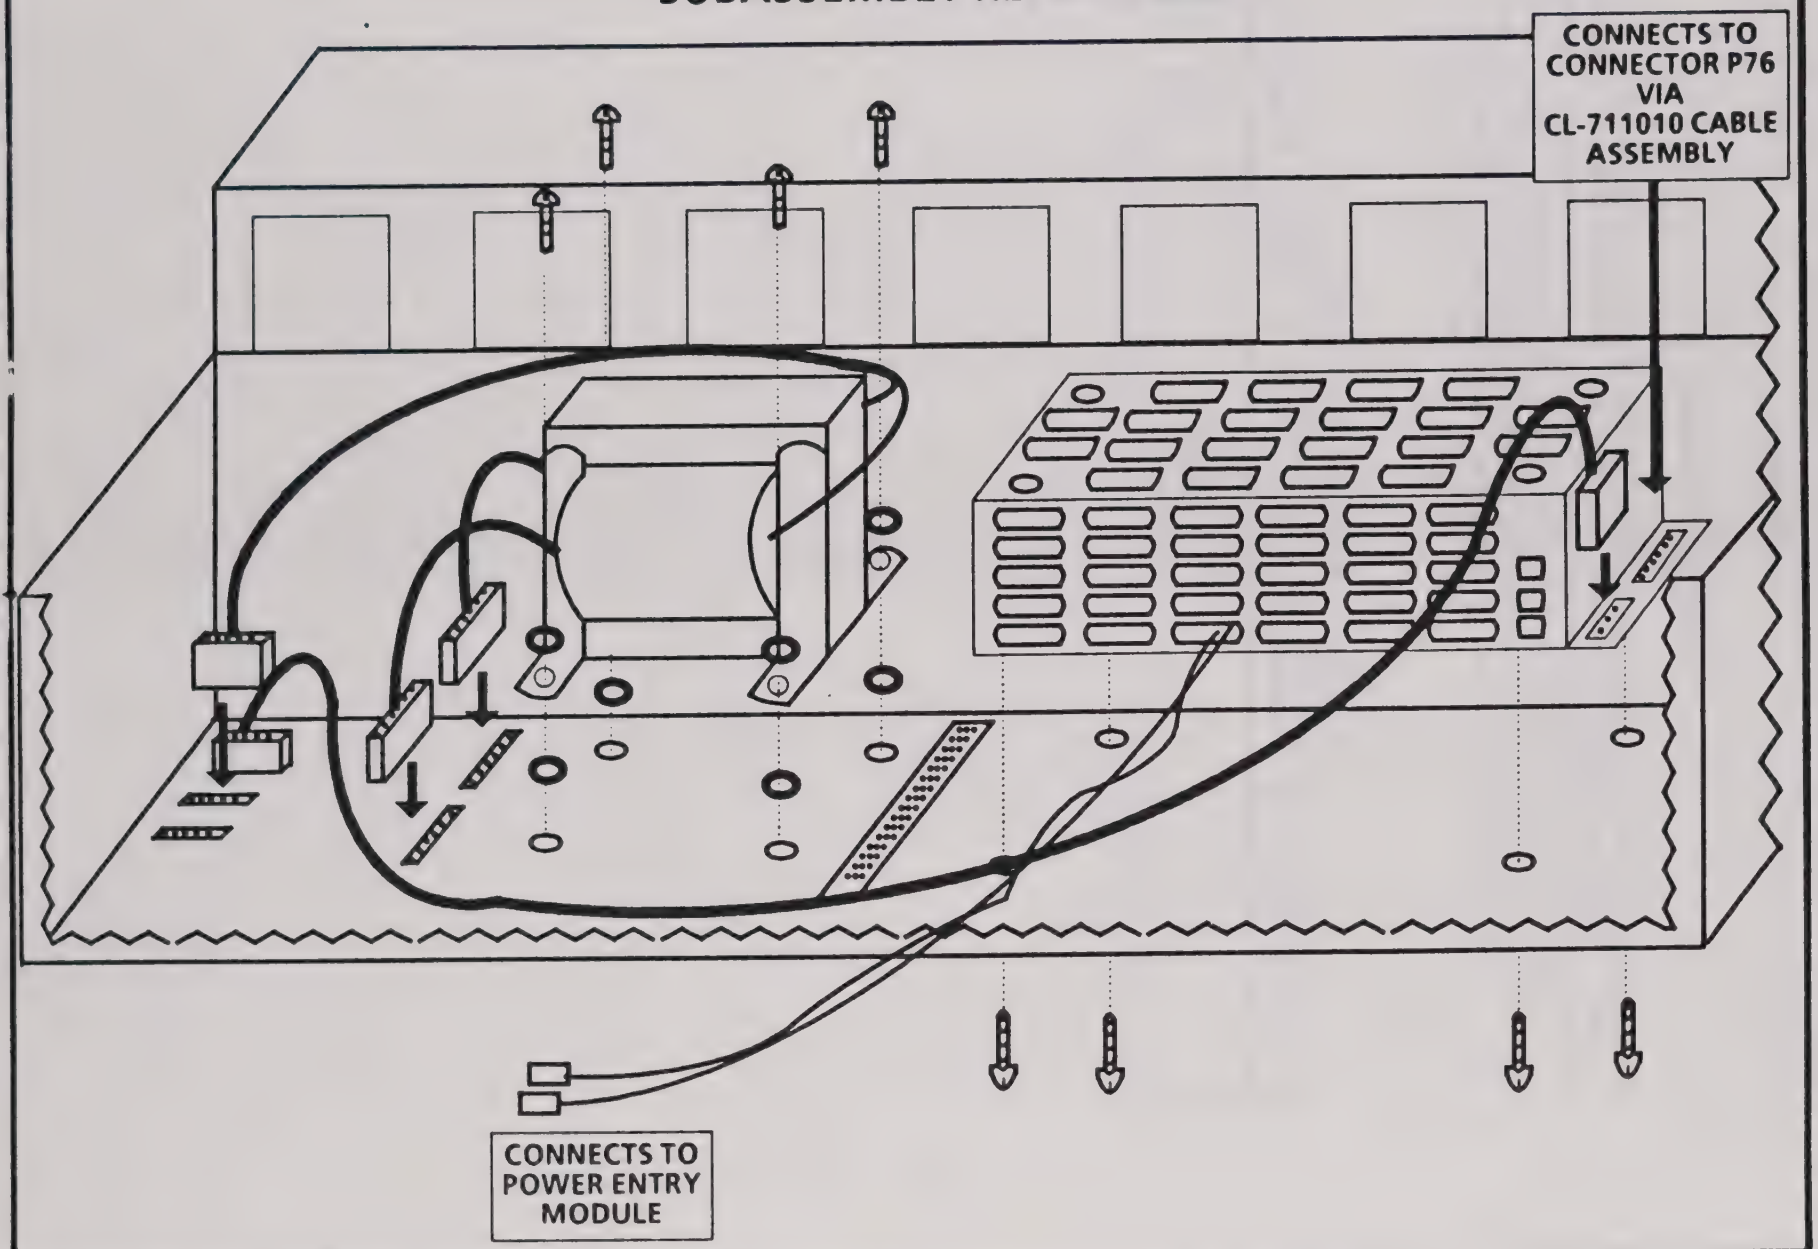

# APPENDIX A

## SCHEMATIC DRAWINGS

This section contains complete schematic drawings for this Gould product. The following schematics were of the latest revision at time of printing. The schematics are arranged in numerical order by drawing number. All documenents included in the section are listed below, in alphanumeric order by title, along with their drawing numbers to help located them. The part umber of any PC board assembly may be obtained by replacing the initial "2" in the schematic number with an "8".

### ALPHABETICAL LIST OF SCHEMATICS

| DESCRIPTION OF ASSEMBLY | SCHEMATIC DRAWING NUMBER | REVISION LEVEL |
|---|---|---|
| DISTRIBUTION BOARD | 297582 | C |
| MOTHER BOARD | 297581 | B |
| SYSTEM BLOCK DIAGRAM | CL-211476 | |

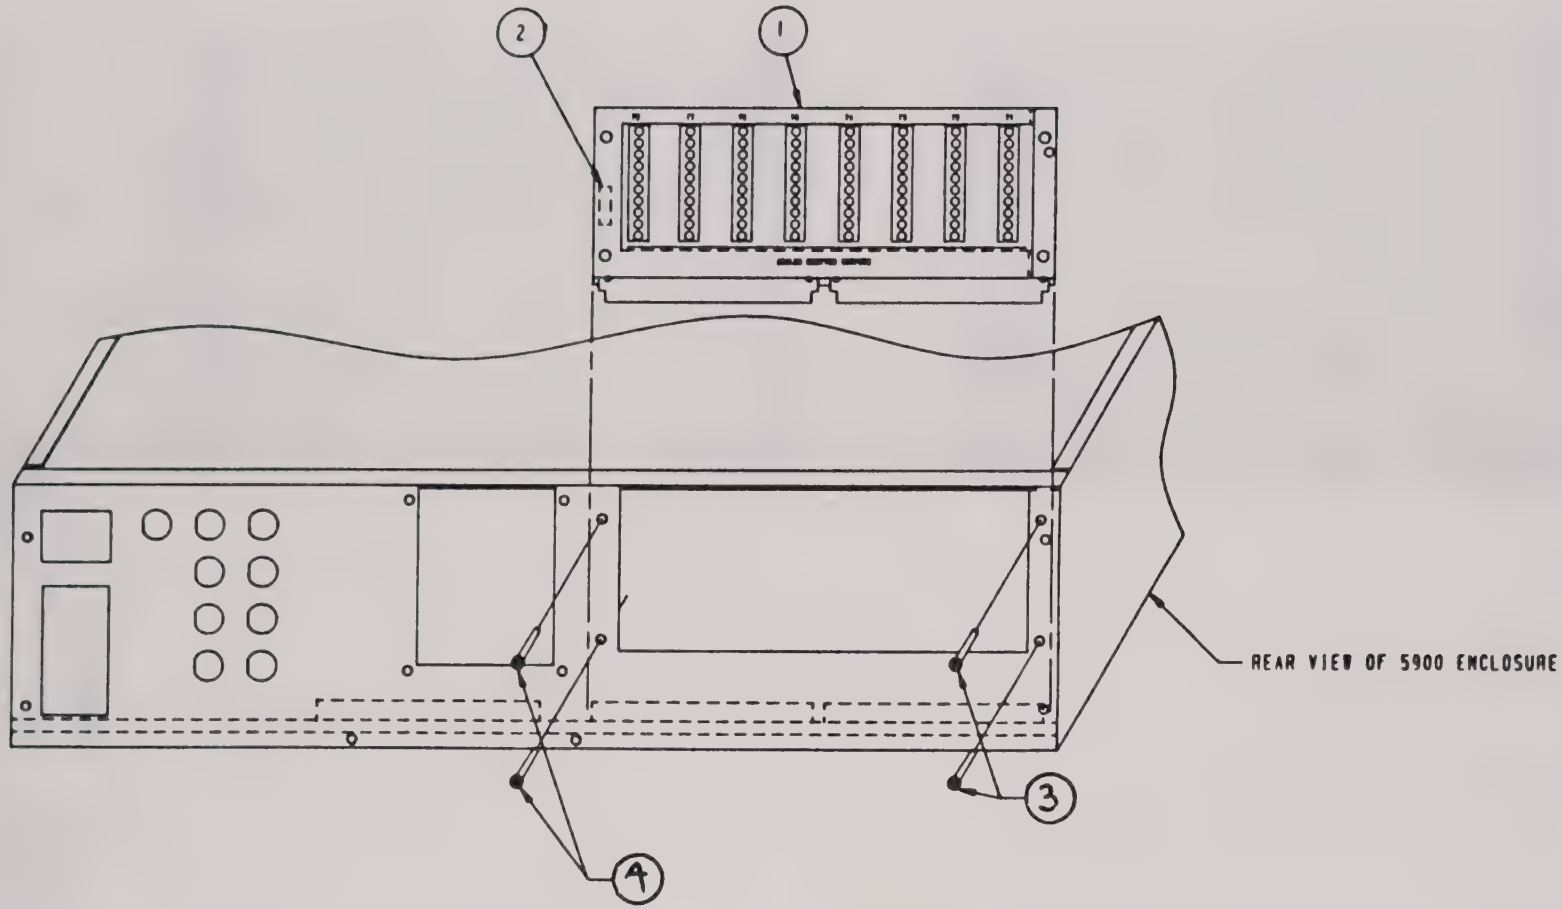


FIGURE 6 - 8 MEDICAL BOARD KIT

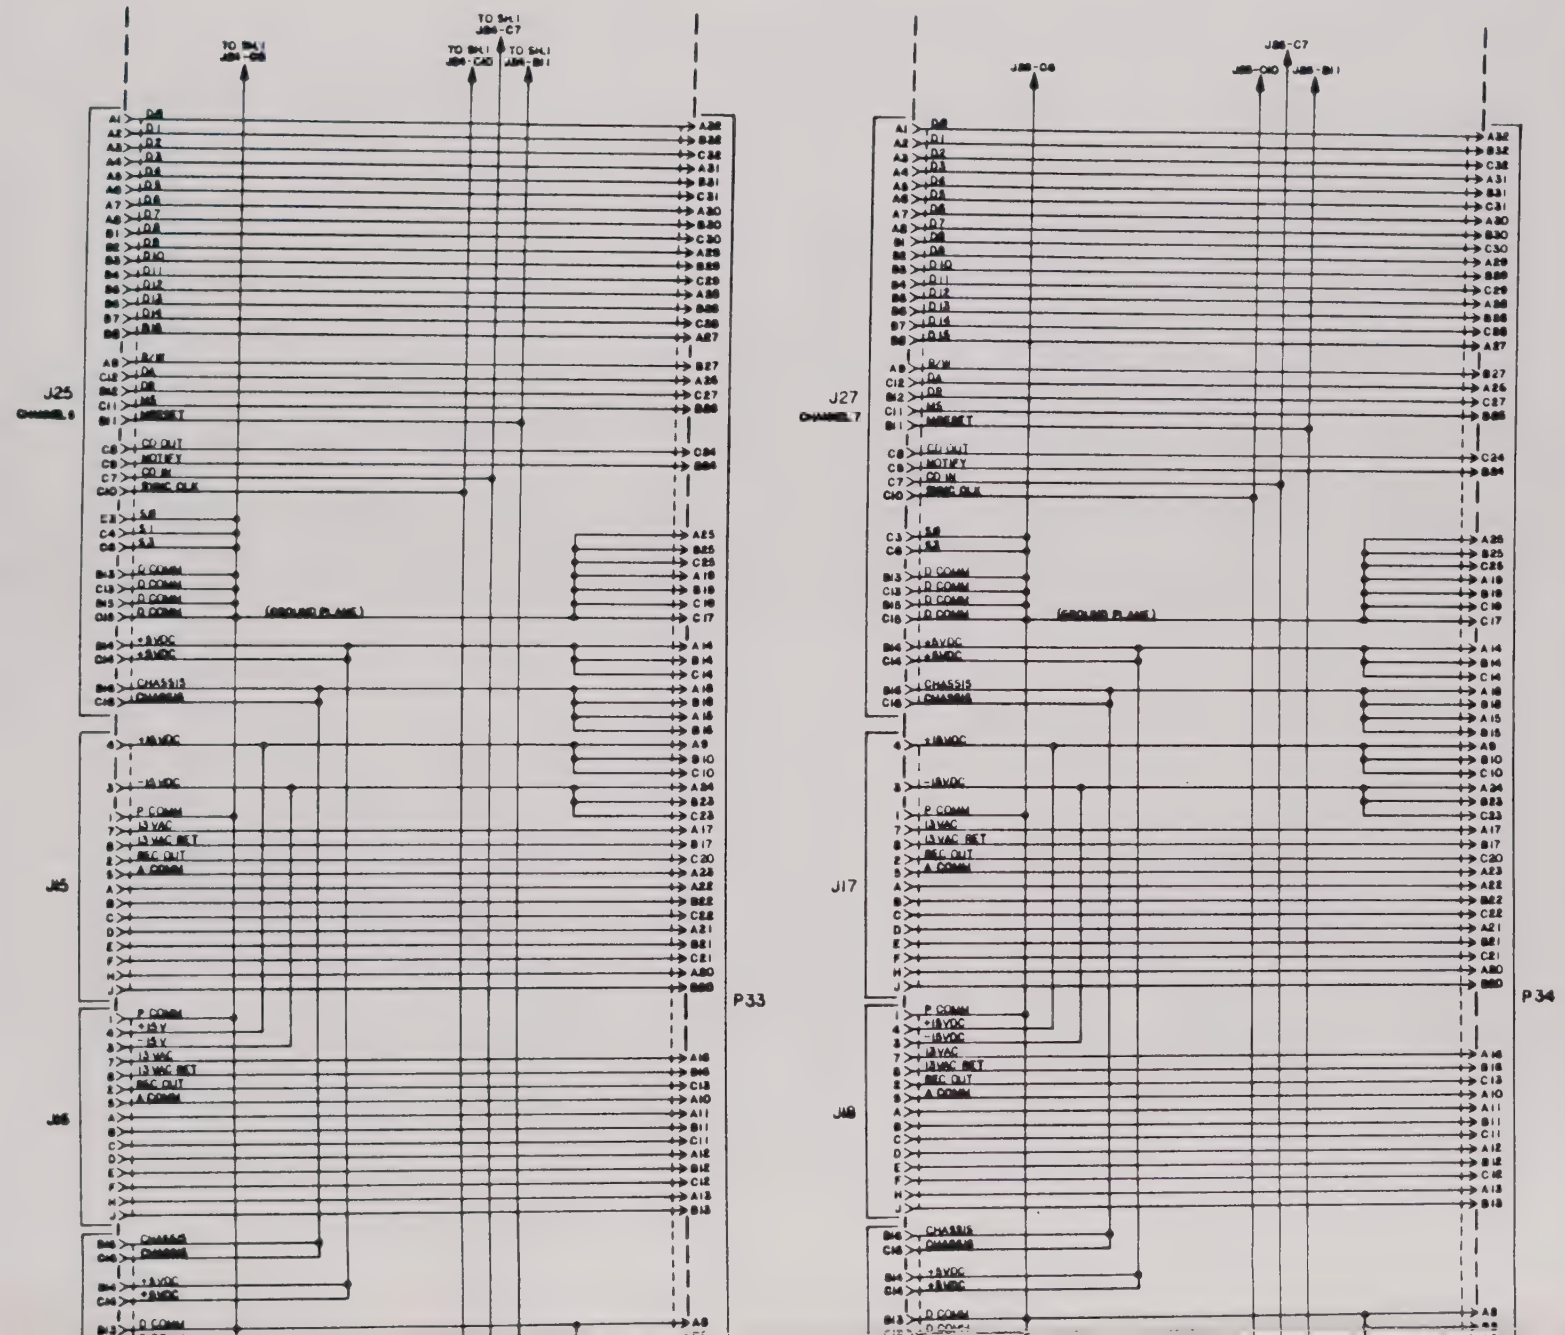
J25
J35
J36
P33
J27
J17
J18
P34
(GROUND PLANE)
+8VDC
-18VDC
+18VDC
+13V
-13V
13 VAC
CHASSIS
P COMM
A COMM
D COMM
MOTHER

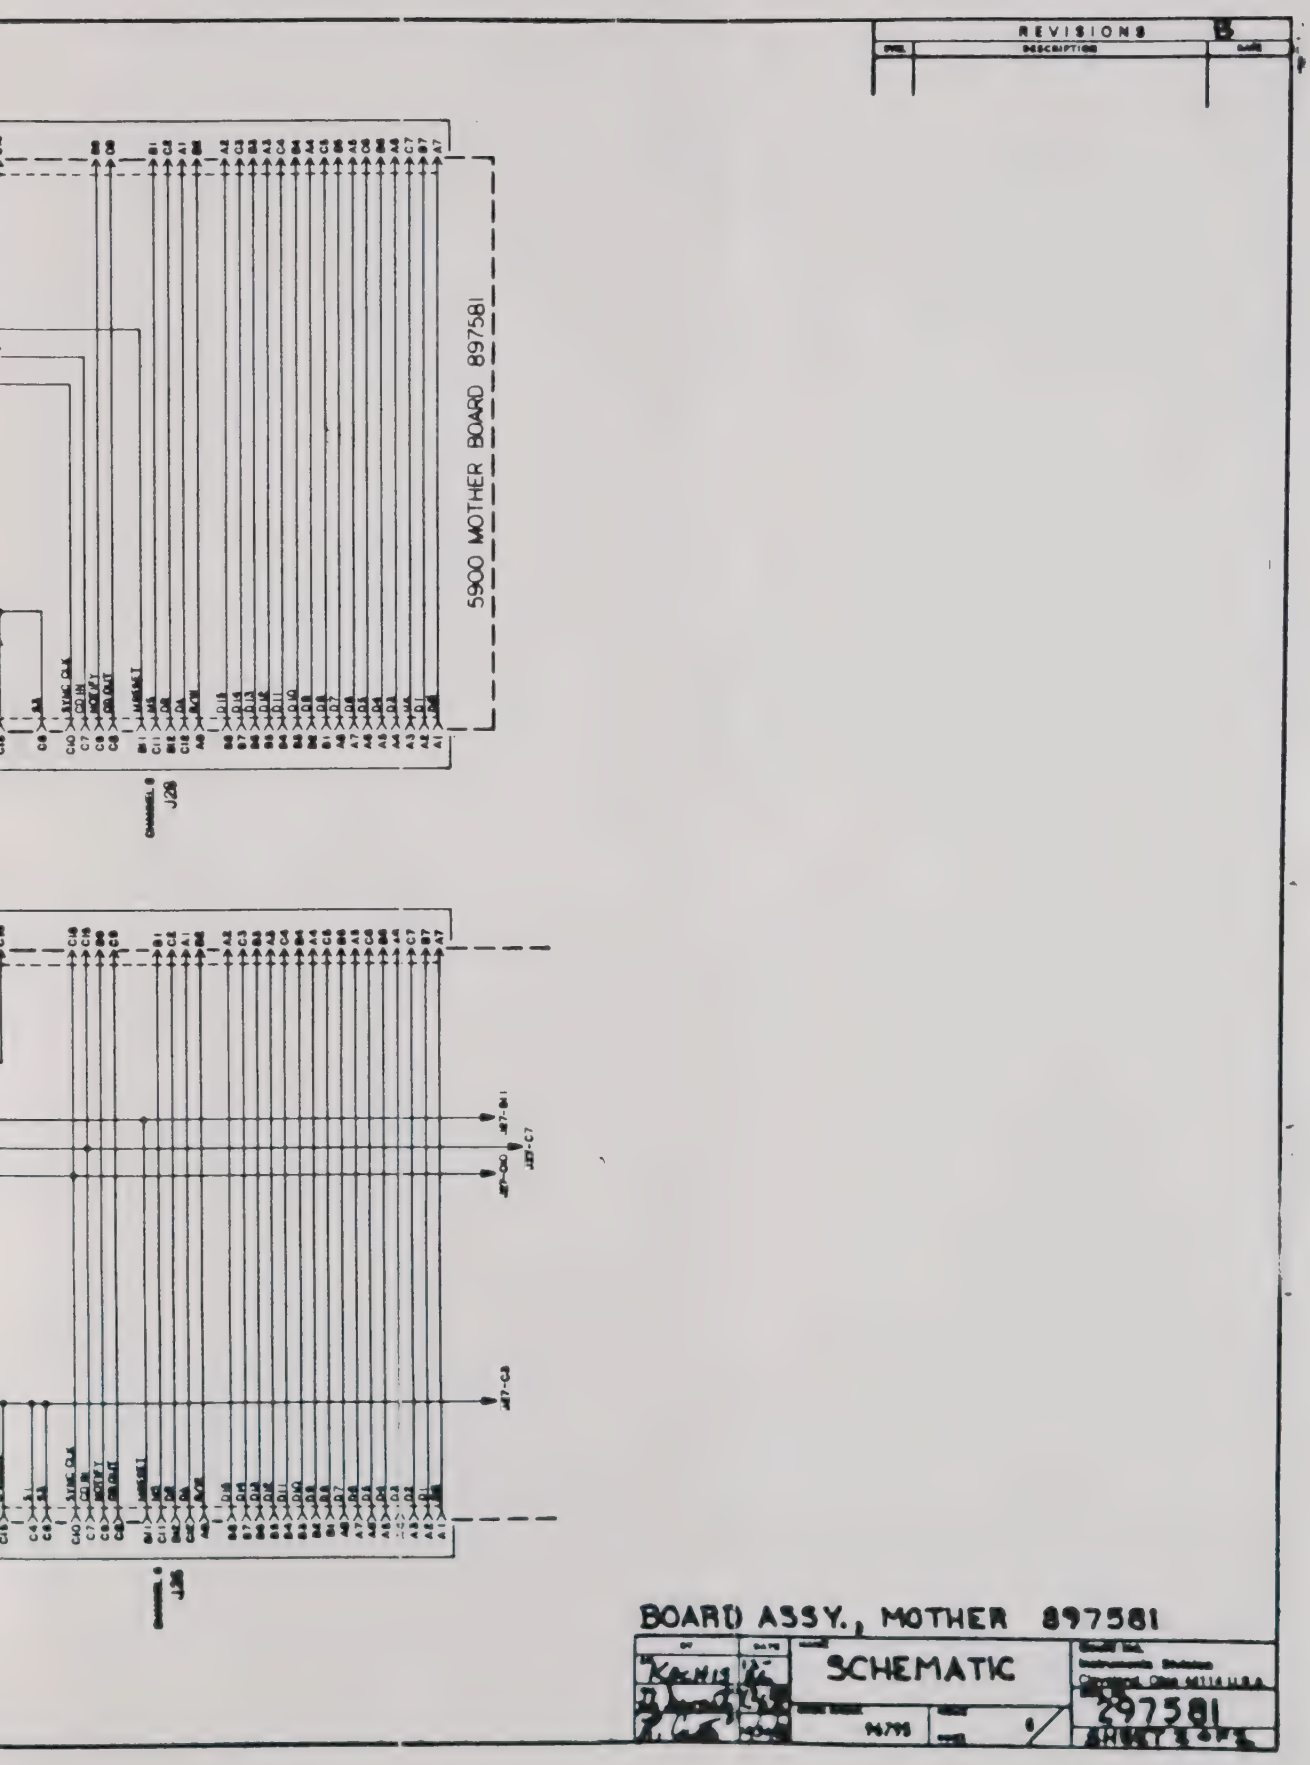
REVISIONS
5900 MOTHER BOARD 897581
J28
J26
BOARD ASSY., MOTHER 897581
SCHEMATIC
897581

5900 MOTHER BOARD 897581
J21
J11
J12
P31
J23
J13
J14
P32
(GROUND PLANE)
(GROUND PLANE)

| REV | DESCRIPTION | DATE | APPD |
|---|---|---|---|
| B | ORIGINAL RELEASE DCN 33750 RIVERA | 12-20-86 | MF |

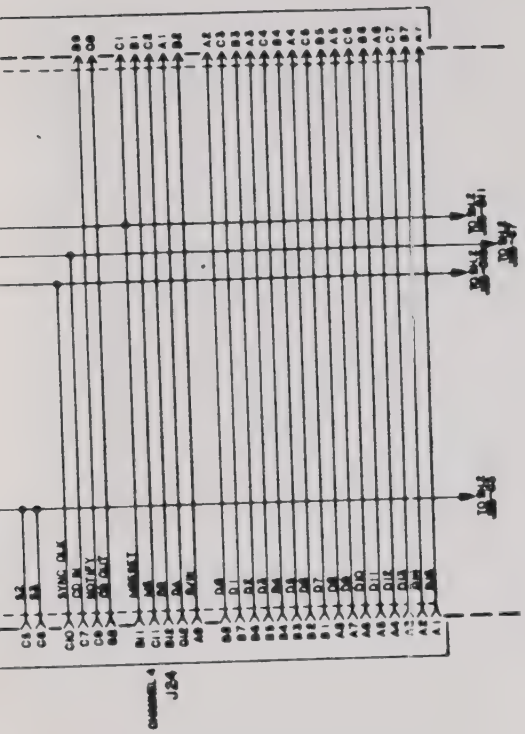

297581 1

BOARD ASS'Y, MOTHER 897581

| | | | |
|---|---|---|---|
| BY: MONS | DATE: | SCHEMATIC | Hewlett-Packard Instruments Division Colorado Springs Division 297581 |
| | | SIZE: A | SHEET 1 OF 2 |

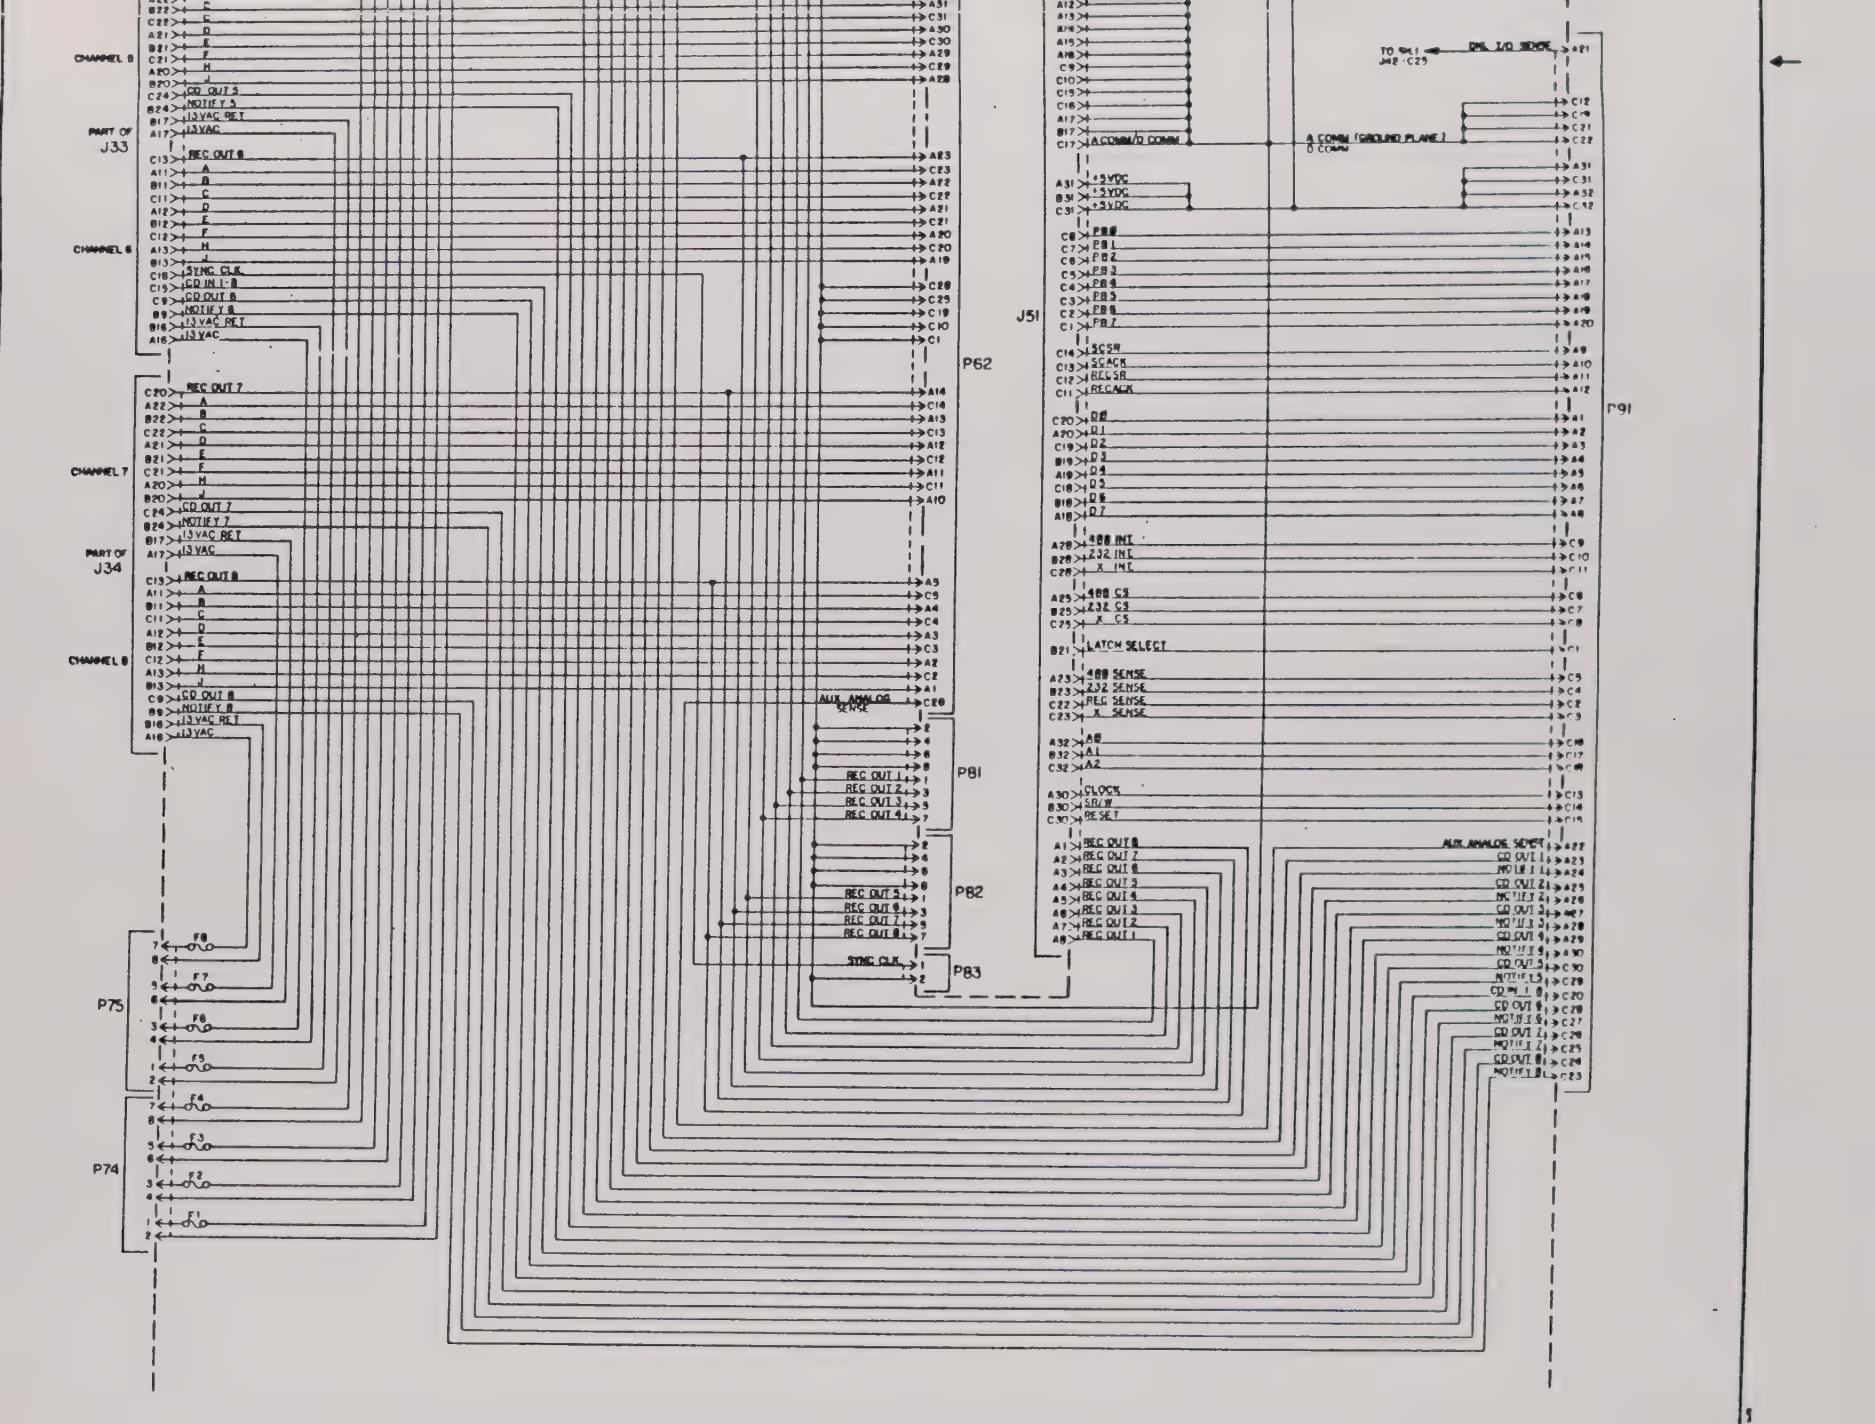
CHANNEL 8
PART OF J33
CHANNEL 8
CHANNEL 7
PART OF J34
CHANNEL 8
P62
P81
P82
P83
P75
P74
J51
P91
F9
F7
F6
F5
F4
F3
F2
F1
REC OUT 8
REC OUT 7
CD OUT 8
NOTIFY 8
+13 VAC RET
+13 VAC
SYNC CLK
CD IN 1-8
REC OUT 1
REC OUT 2
REC OUT 3
REC OUT 4
REC OUT 5
REC OUT 6
AUX ANALOG SENSE
+5 VDC
A COMM/D COMM
LATCH SELECT
CLOCK
SR/W
RESET
488 INT
232 INT
X INT
488 CS
232 CS
X CS
488 SENSE
232 SENSE
REC SENSE
X SENSE
SCSR
SCACK
RECSR
RECACK
TO 941 J42 C25
DRL I/O SENSE
A COMM (GROUND PLANE) D COMM

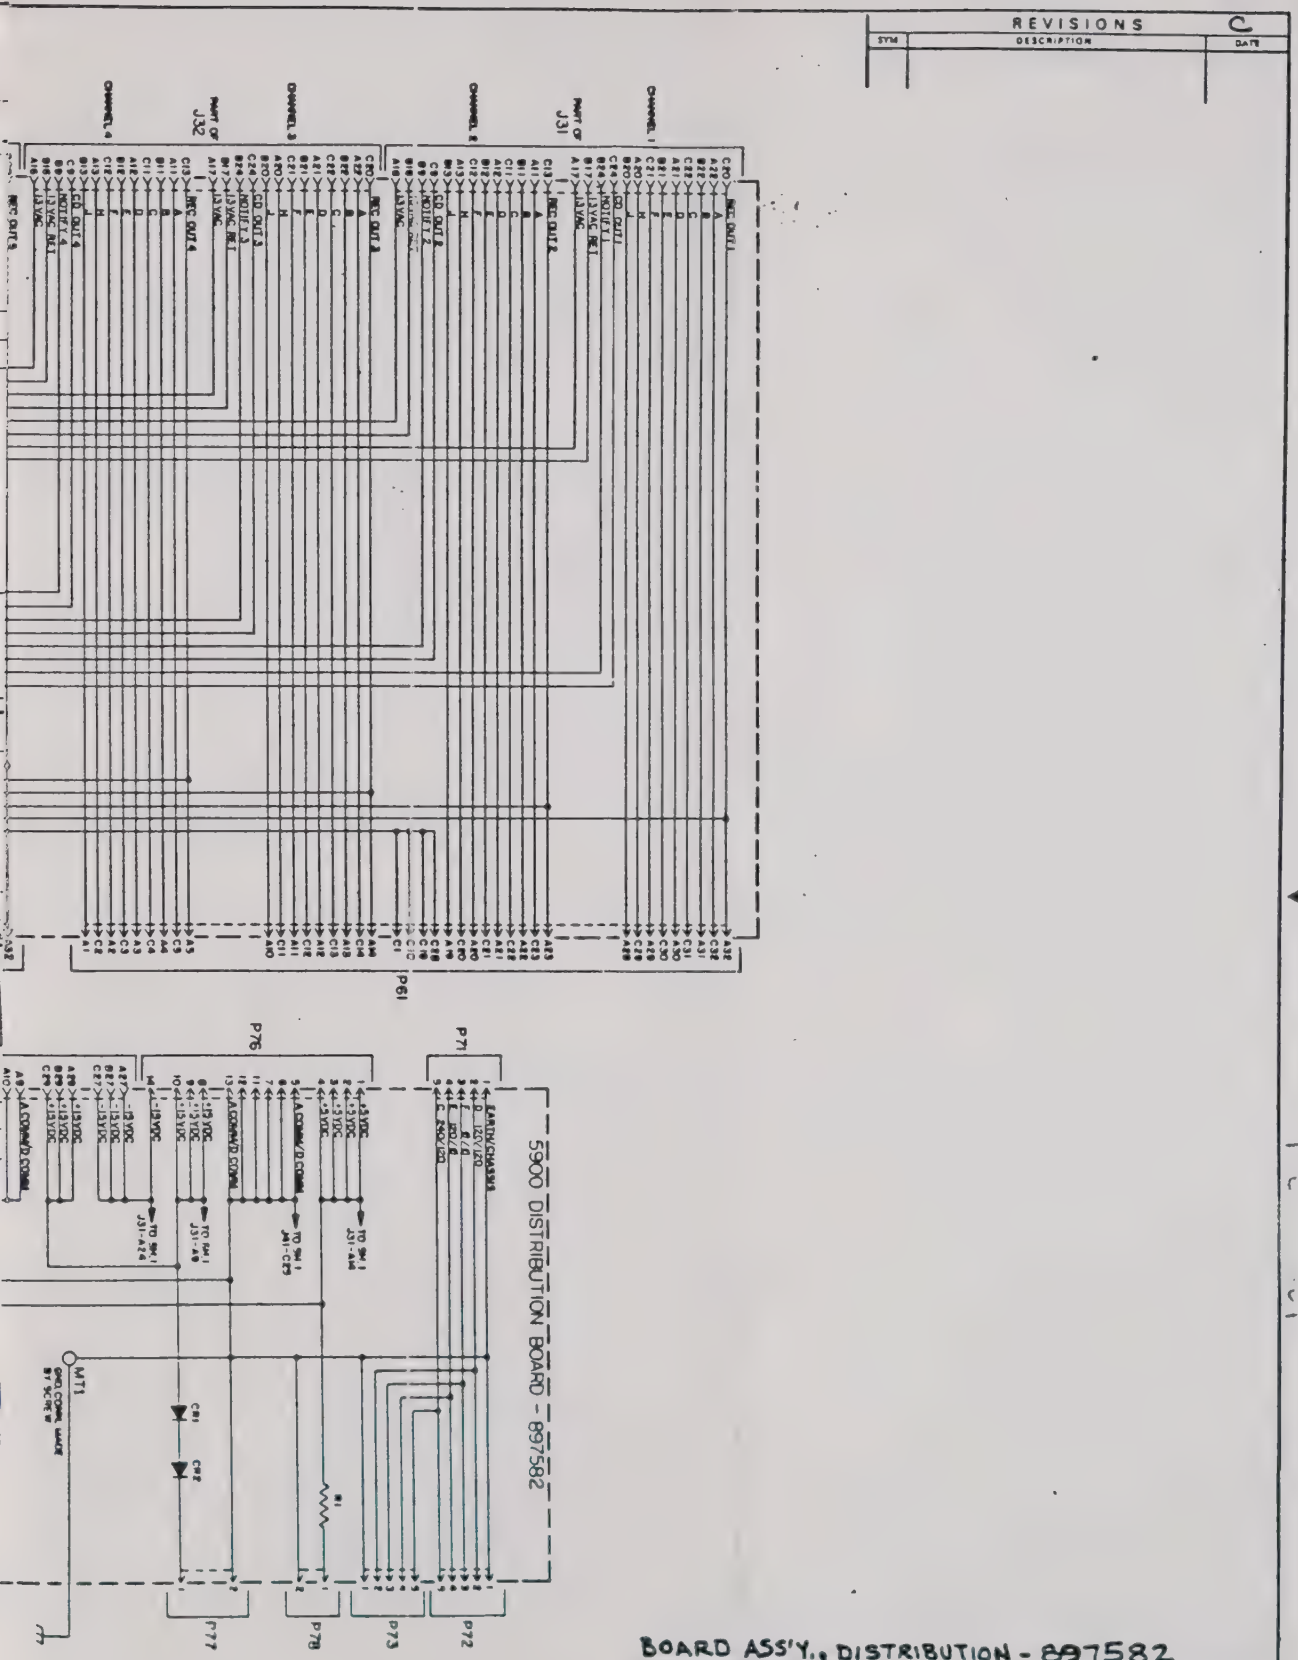


BOARD ASS'Y., DISTRIBUTION - 897582

| | | | |
|---|---|---|---|
| DR KOCHIS 7-26 | SCHEMATIC | Gould Inc. Instruments Division Cleveland, Ohio 44114 U.S.A. | |
| | CODE IDENT 96795 | SIZE G | PART NO. 297582 |
| | | | SHEET 2 OF 2 |

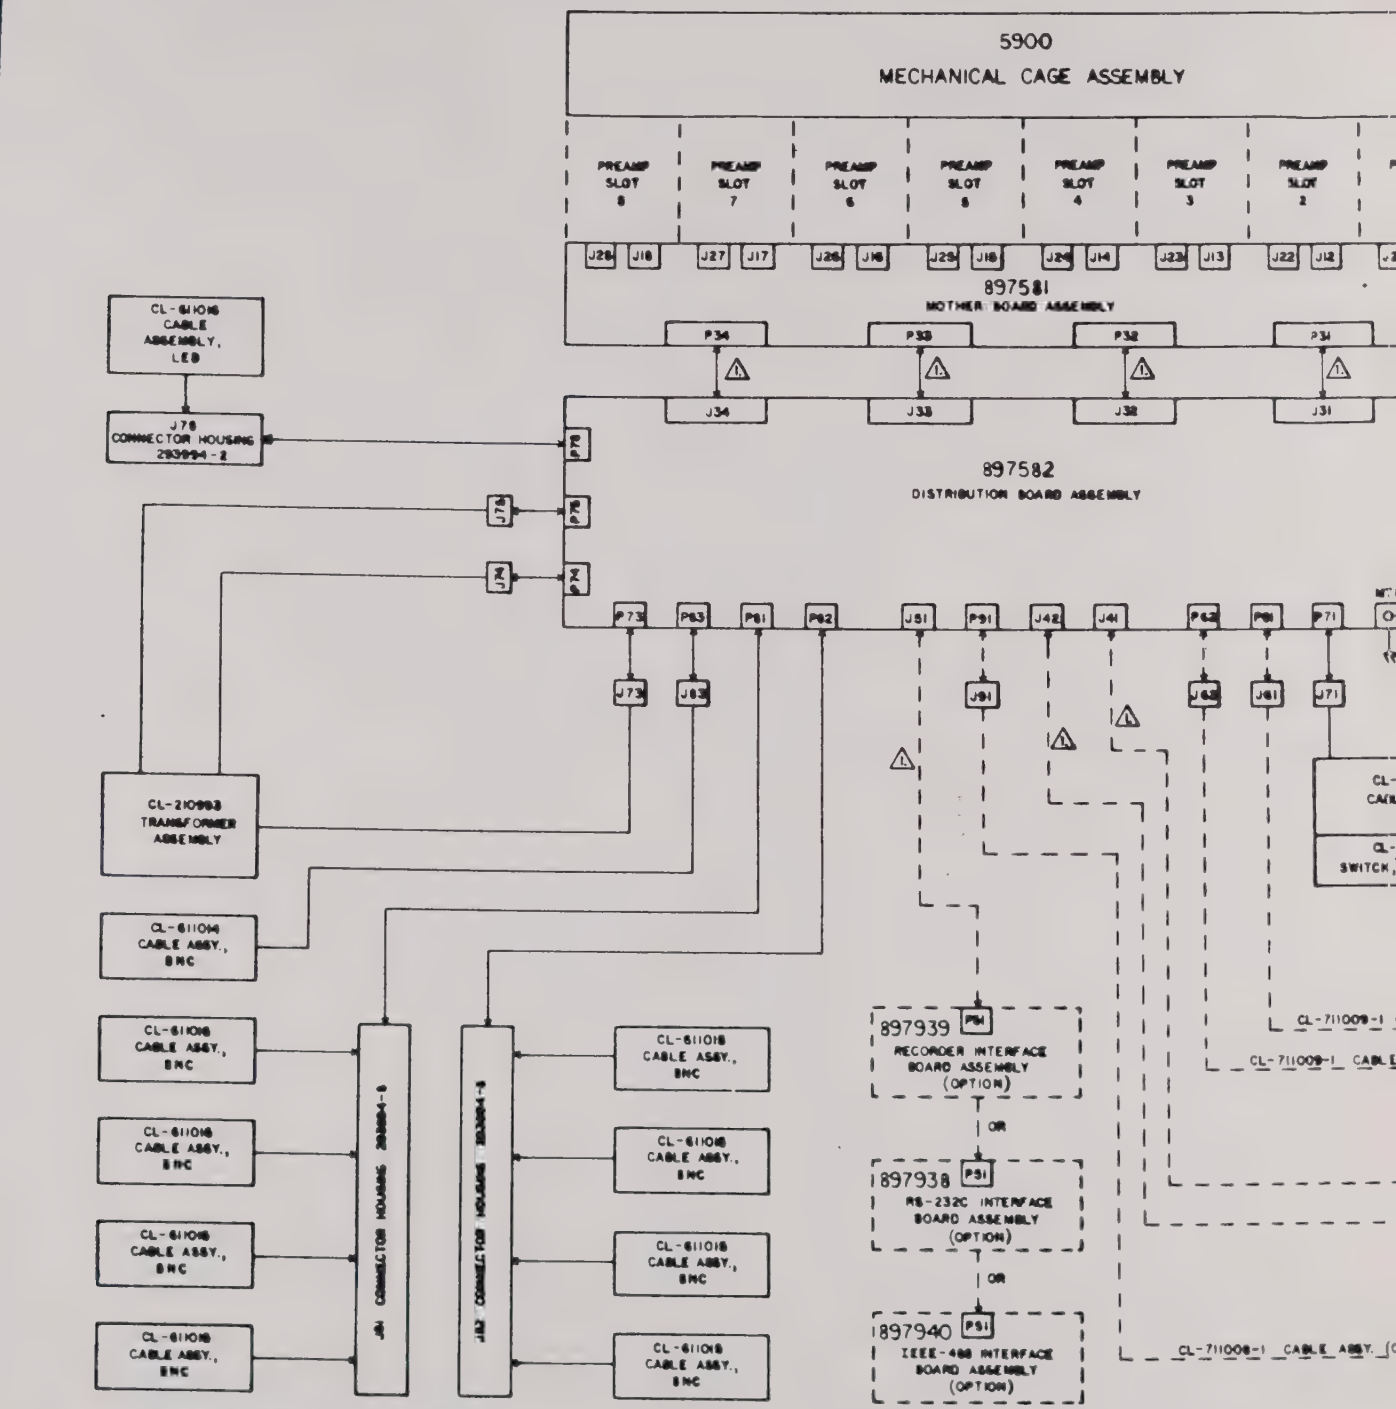


NOTES:

1. DENOTES BOARD TO BOARD CONNECTORS.
2. ASSEMBLY 897936 IS REQUIRED FOR USE OF ASSEMBLIES 897938 AND 897940 AND/OR STATUS REPORTING.

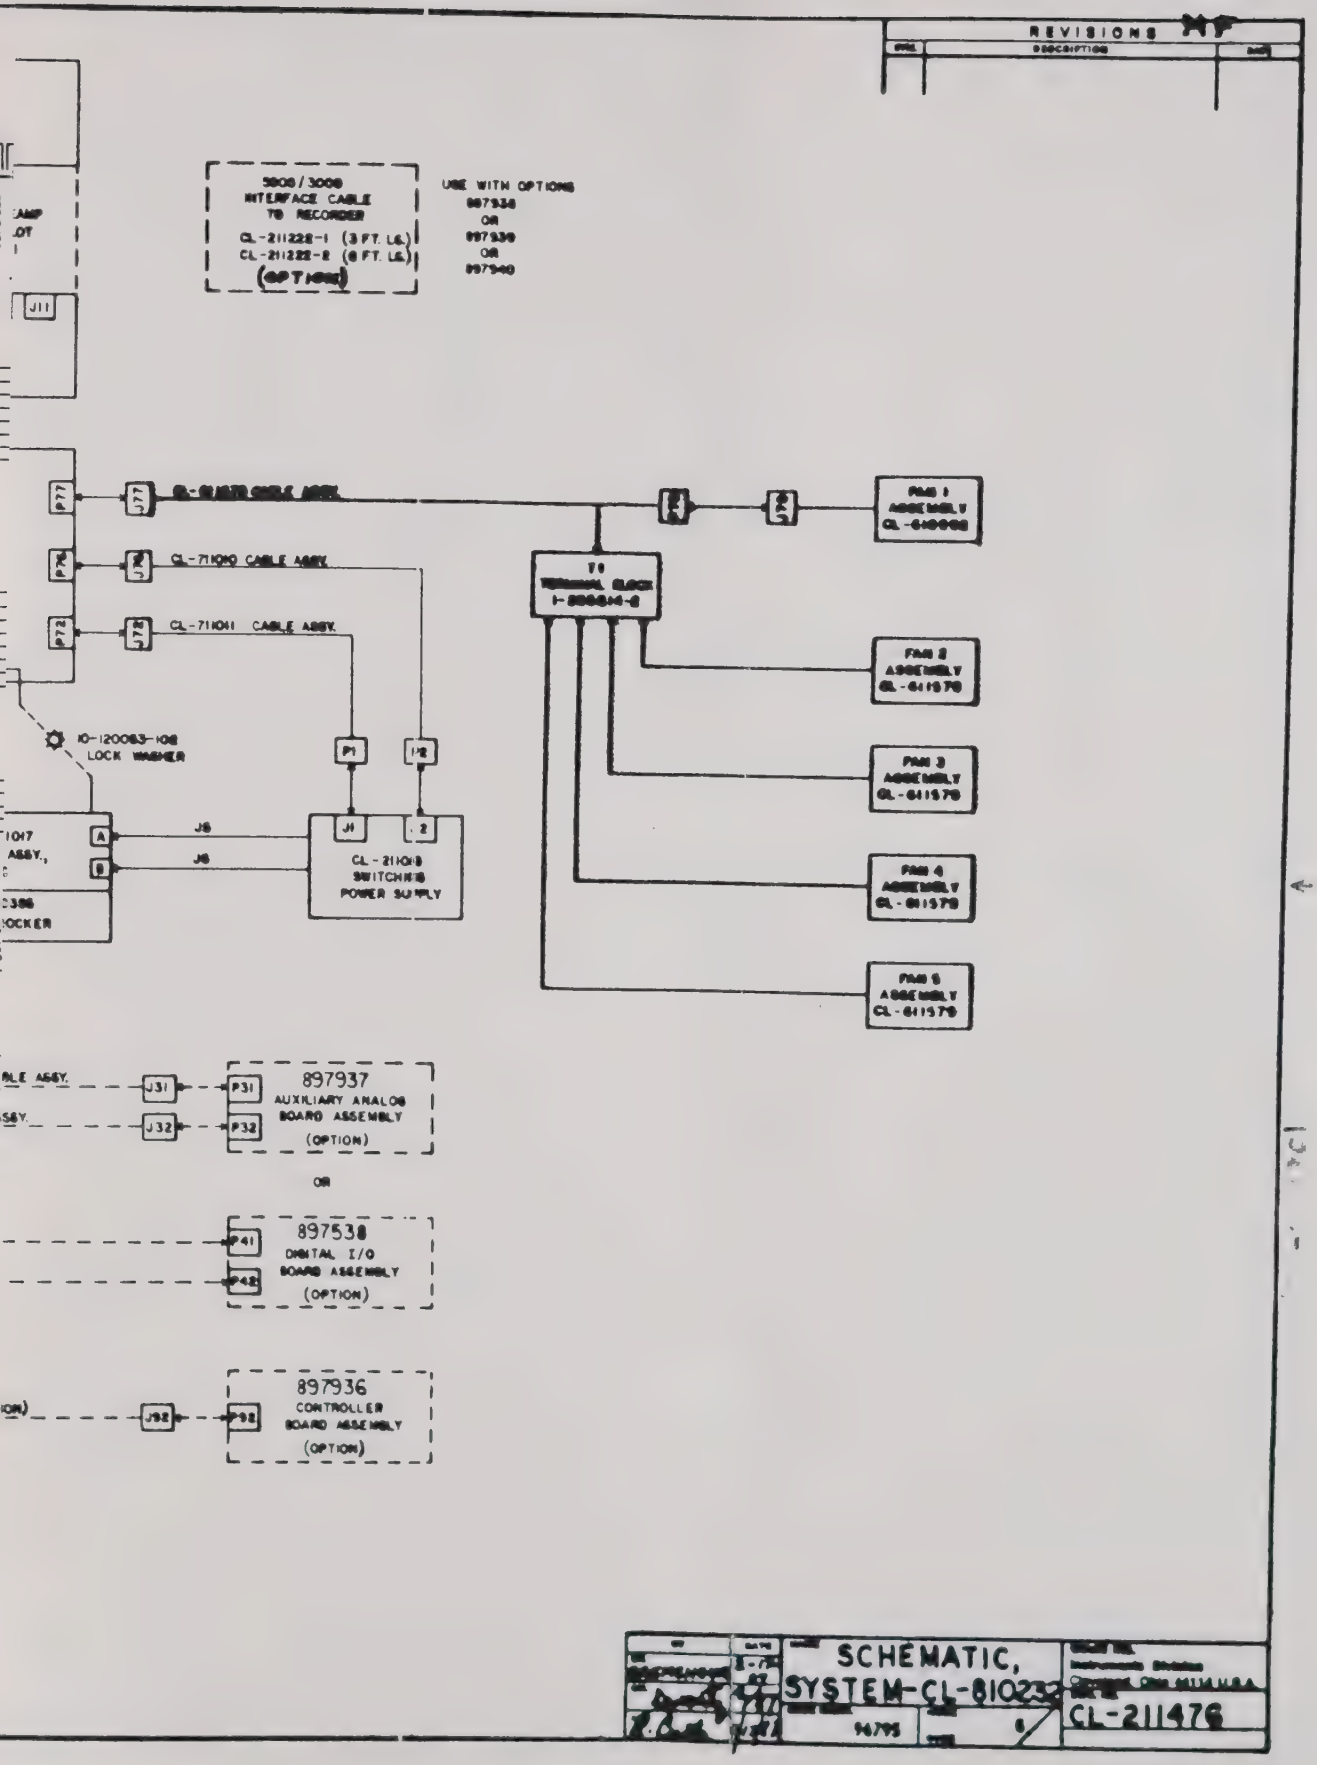
REVISIONS
9908/3008
INTERFACE CABLE
TO RECORDER
CL-211222-1 (3 FT. LG.)
CL-211222-2 (6 FT. LG.)
(OPTIONS)
USE WITH OPTIONS
897934
OR
897939
OR
897940
J11
P77
J77
CL-71I010 CABLE ASSY.
P72
J72
CL-71I011 CABLE ASSY.
10-120063-108
LOCK WASHER
P1
P2
J8
J8
J1
J2
CL-211018
SWITCHING
POWER SUPPLY
TO
TERMINAL BLOCK
1-858614-8
FAN 1
ASSEMBLY
CL-611578
FAN 2
ASSEMBLY
CL-611578
FAN 3
ASSEMBLY
CL-611578
FAN 4
ASSEMBLY
CL-611578
FAN 5
ASSEMBLY
CL-611578
J31
J32
P31
P32
897937
AUXILIARY ANALOG
BOARD ASSEMBLY
(OPTION)
OR
P41
P42
897538
DIGITAL I/O
BOARD ASSEMBLY
(OPTION)
J92
P92
897936
CONTROLLER
BOARD ASSEMBLY
(OPTION)
SCHEMATIC,
SYSTEM-CL-810232
CL-211476

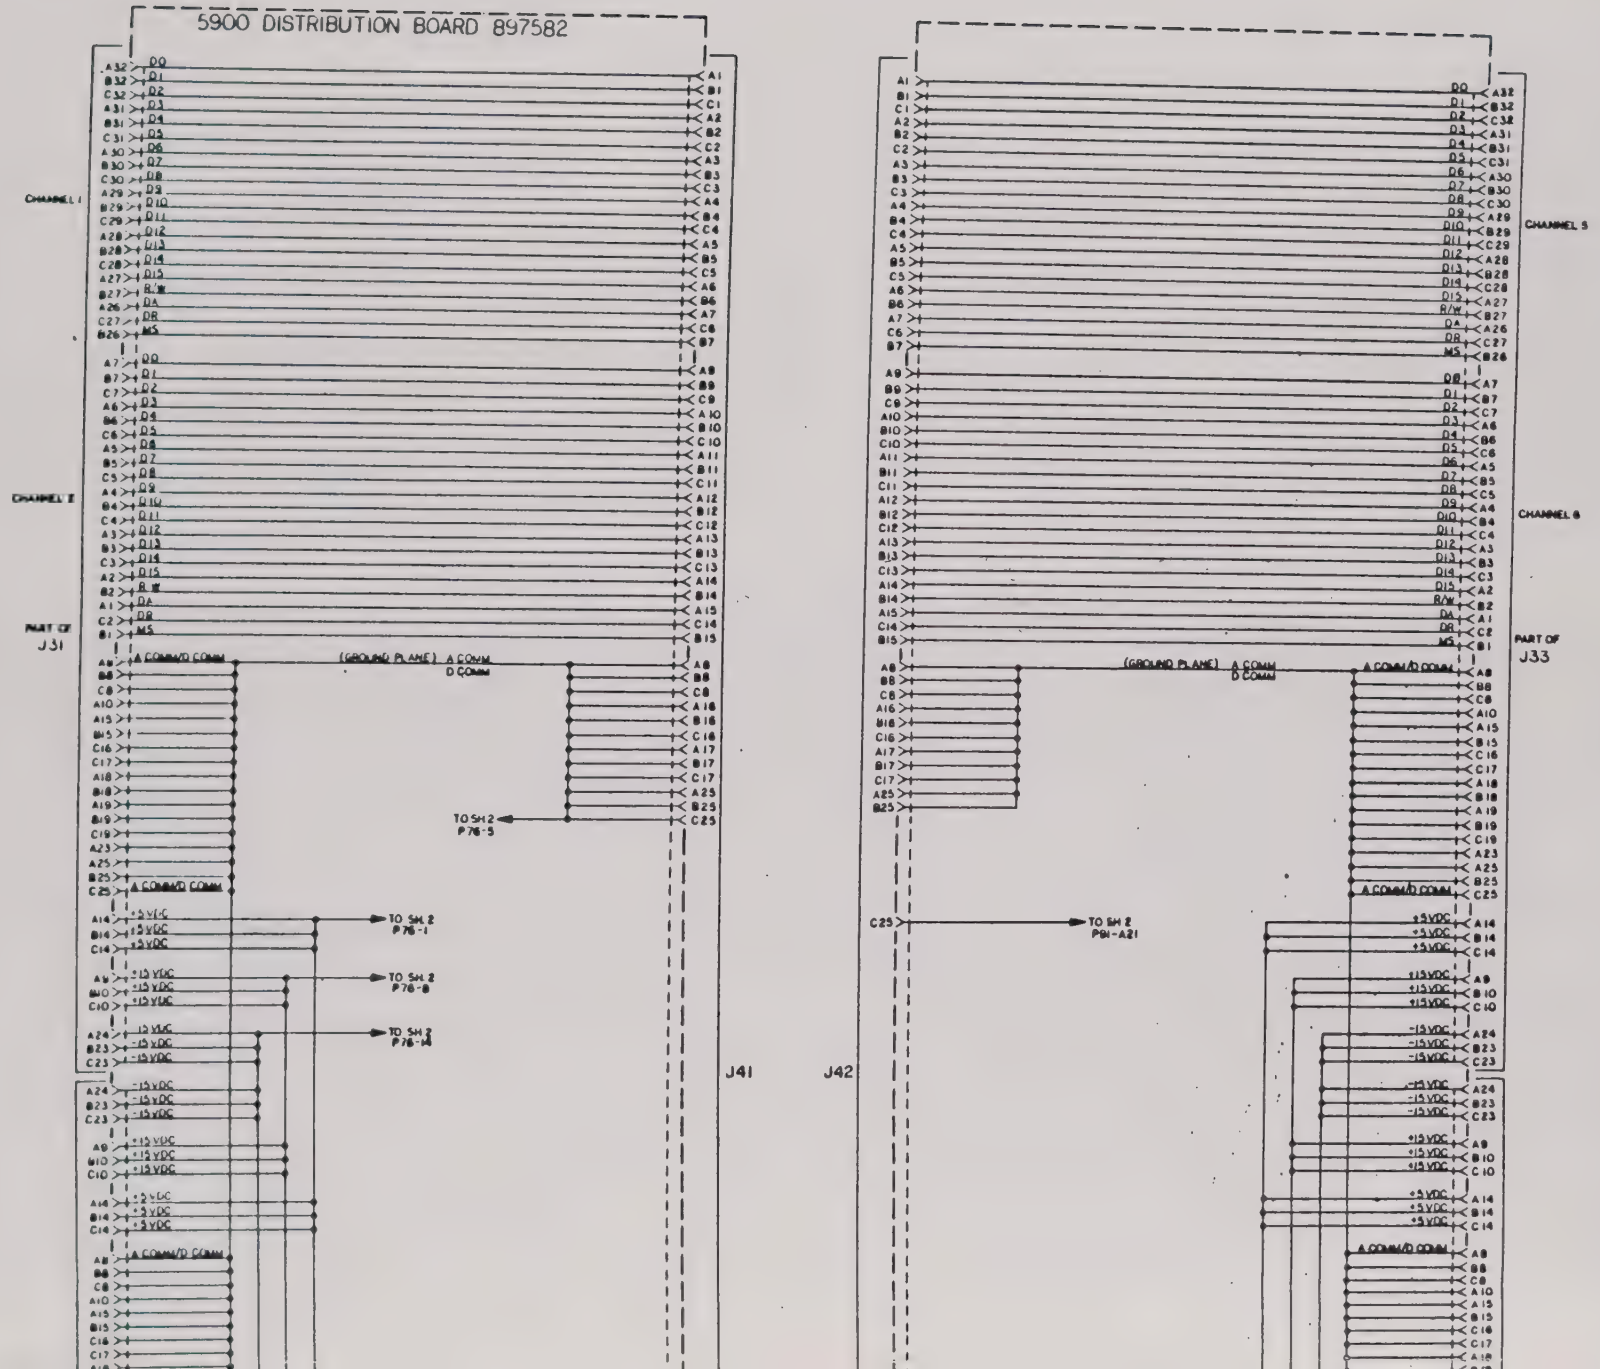
5900 DISTRIBUTION BOARD 897582
CHANNEL 1
CHANNEL 2
CHANNEL 5
CHANNEL 6
PART OF J31
PART OF J33
J41
J42
A COMM/D COMM
(GROUND PLANE) A COMM D COMM
TO SH 2 P76-1
TO SH 2 P76-8
TO SH 2 P76-14
TO SH 2 P76-5
TO SH 2 P81-A21
+5 VDC
+15 VDC
-15 VDC

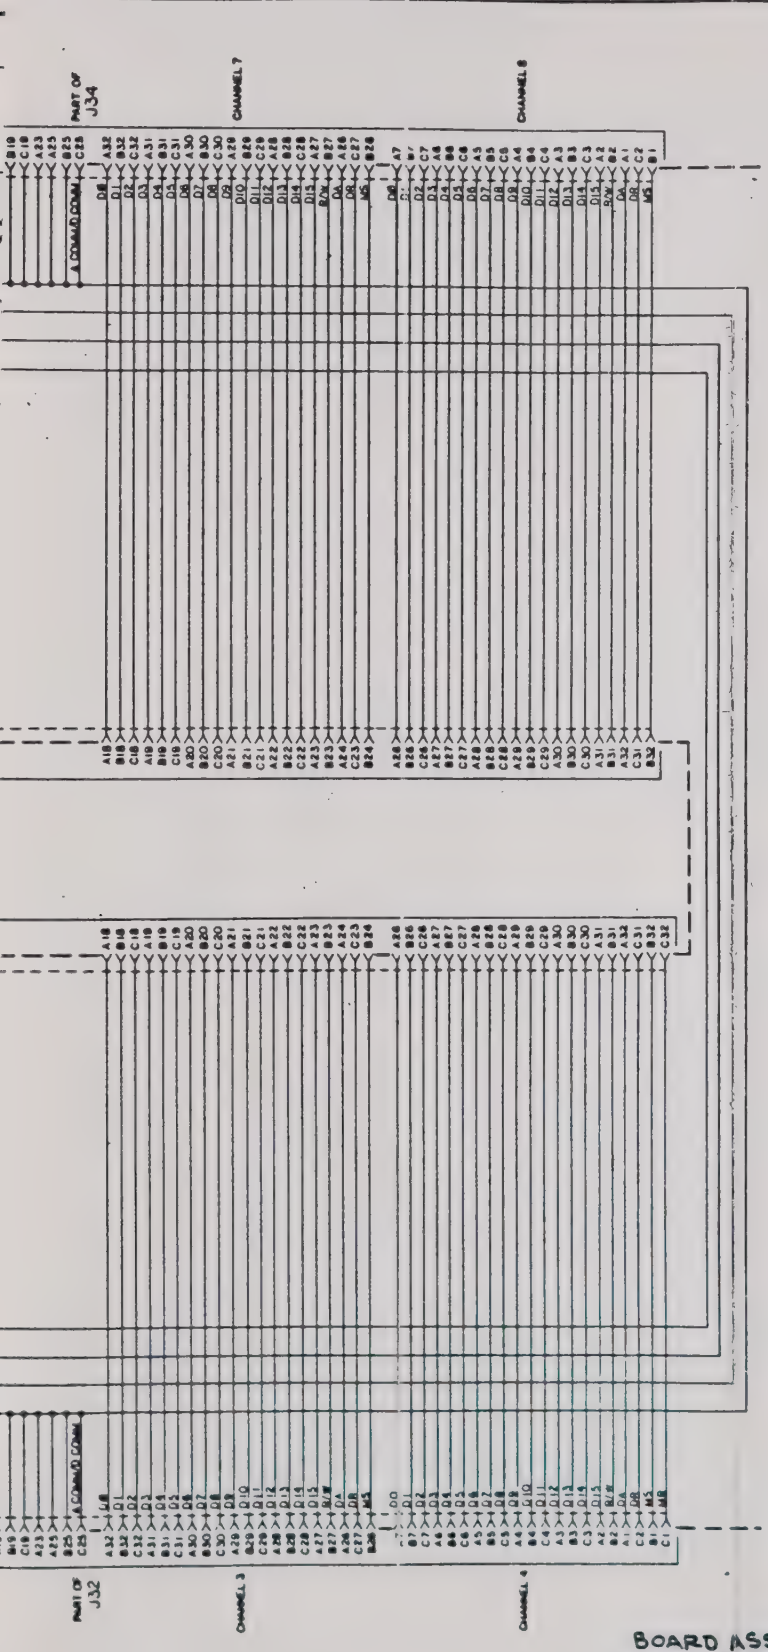


| REVISIONS | | |
|---|---|---|
| SYM | DESCRIPTION | DATE |
| C | ORIGINAL RELEASE DCN 33759 SWARTZ | 12-29-86 |
| D | CHANGED PER DCN 34661. KISNER | 11/16/87 |

BOARD ASS'Y, DISTRIBUTION - 897582

| | | | |
|---|---|---|---|
| DRAWN | DATE | SCHEMATIC | Gould Inc. Instruments Division Cleveland Ohio 44114 U.S.A. |
| CHECKED | 12-86 | | |
| ENGR APPROVAL | 11/17 | CODE IDENT 96795 | SIZE D — 297582 |
| | | | SHEET 1 OF 2 |

Procedure: ..... (1) Refer to defective amplifier's manual for more information.
(2) Check DC voltages on connector J11-J18. If voltages are incorrect, check continity between connectors and supply or check output voltages from the supply.
(3) Check 13 VAC on connector J11-18. If voltages are incorrect, check slot fuses or 13 VAC from secondary section of transformer.
(4) Check continity between connectors J11-J18 and the frame's output connectors(BNC, recorder interface or Auxiliary connectors).

Symptom #3: ..... 3000 recorder cannot receive the amplifier's status.

Condition: ..... (1) Amplifier does not have status board.
(2) 5900 frame does not have Interpreter board option.
(3) Faulty connection between 3000 recorder and 5900 frame.
(4) The +5 VDC on the switching power supply is defective.

Procedure: ..... (1) Cannot receive amplifier's status without the status board option on the amplifier.
(2) Cannot receive amplifier's status without the Interpreter board option.
(3) Check cable between 3000 recorder and 5900 frame.
(4) Check to see if there is 5 VDC on connectors J21-J28.

## 5.6 SUBASSEMBLY REPLACEMENT

The replacement of the transformer (CL-210993) and the switching power supply (P/N CL-211018) are shown in Figure 5-3.

# SECTION VI

# PARTS IDENTIFICATION

## 1.1 GENERAL

This instrument has been accurately calibrated and adjusted before shipment from the factory and should give long, trouble-free service. For servicing beyond the scope of the instructions contained in this manual or the technical equipment available, contact your nearest Gould Representative listed on the warranty card shipped with the instrument.

The following parts list and schematic diagrams are designed to assist in servicing and repairing the instrument.

**NOTE: Check to be sure the schematic number and revision letter stamped on the rear of the instrument agree with the number and revision letter on the schematic contained in this section.**

To assure prompt and satisfactory delivery of replacement parts, include the following with the purchase order:

1. Name, model number, and serial number of the instrument.

   For Example: 5900 Signal Conditioner Frame Model CL-810232
   Serial Number _____.

2. Description of the part as listed in the manual.

3. Gould part number.

**NOTE: Do not user the SYMBOL NUMBER from the parts list for identifying desired parts on the order.**

The items listed are not necessarily procurable. If an item is marked with a carat (^), it is shown for referance only and is not procurable.

GOULD 5900 SIGNAL CONDITIONER FRAME, PART NUMBER CL-810231 OR CL-810232
FIGURE 6-1 AND FIGURE 6-2

| ITEM NO. | PART NO. | DESCRIPTION | SYMBOL NO. |
|---|---|---|---|
| 1 | CL-610771-1 | GUIDE, ENGRAVED | |
| 2 | CL-610771-2 | GUIDE, ENGRAVED | |
| 3 | CL-610771-3 | GUIDE, ENGRAVED | |
| 4 | CL-610771-4 | GUIDE, ENGRAVED | |
| 5 | CL-610771-5 | GUIDE, ENGRAVED | |
| 6 | CL-610771-6 | GUIDE, ENGRAVED | |
| 7 | CL-610771-7 | GUIDE, ENGRAVED | |
| 8 | CL-610771-8 | GUIDE, ENGRAVED | |
| 9 | 13-262716-2604 | SCREW, SELF TAPPING | |
| 10 | 386058-6 | GUIDE, PREAMP BOTTOM | |
| 11 | CL-611016 | CABLE ASSY., LED | |
| 12 | CL-811122 | *SHELF ASSY., BOTTOM | |
| 13 | 13-262716-6206 | SCREW, SELF TAPPING | |
| 14 | CL-711098 | PANEL ASSY., FRONT TRIM | |
| 15 | 243898-02 | NUT ASSY. | |
| 16 | CL-610820 | EJECTOR ASSY. | |
| 17 | CL-310769 | GUIDE | |
| 18 | CL-711120 | SUPPORT ASSY., FRONT TRIM | |
| 19 | 31-119918-6204 | SCREW, MACH. | |
| 20 | 897581 | BOARD ASSY., MOTHER (SEE FIG 6-4) | |
| 21 | CL-711121 | SUPPORT ASSY., PANEL | |
| 22 | CL-811123 | ENCLOSURE SUBASSY. | |
| 23 | CL-210993 | TRANSFORMER (SEE FIG 6-6) | |
| 24 | 1-118195-305 | WASHER, FLAT | |
| 25 | 31-119918-6208 | SCREW, MACH | |
| 26 | CL-311085 | COVER, REAR | |
| 27 | CL-210355 | SWITCH | |
| 28 | CL-611014 | CABLE ASSY. | |
| 29 | CL-811017 | CABLE ASSY., A.C. | |
| 30 | CL-611015 | CABLE ASSY. | |
| 31 | 293994-8 | CONNECTOR, HOUSING | |
| 32 | 11-4221-06 | RECORDER INTERFACE KIT OPTION (SEE FIG 6-7) | |
| 33 | CL-811465 | PANEL ASSY., SILKSCREEN | |
| 34 | CL-4221-02 | MEDICAL BOARD KIT OPTION (SEE FIG 6-8) | |
| 35 | CL-211018 | POWER SUPPLY, SWITCHING | |
| 36 | 31-119918-6214 | SCREW, MACH. | |
| 37 | 243898-62 | NUT ASSY. | |
| 38 | CL-610992 | FAN ASSY. | |
| 39 | 31-119920-6204 | SCREW, MACH. | |
| 40 | 897582 | BOARD ASSY., DISTRIBUTION (SEE FIG 6-5) | |
| 41 | 10-120053-102 | WASHER, EXT. TOOTH | |
| 42 | 13-262715-6206 | SCREW, SELF TAPPING | |
| 43 | 31-119920-6220 | SCREW, MACH | |
| 44 | 293994-2 | CONNECTOR, HOUSING | |
| 45 | CL-711010 | CABLE ASSY. | |
| 46 | CL-711011 | CABLE ASSY. | |
| 47 | 31-119918-6206 | SCREW, MACH. | |
| 48 | 291067 | CORD, SET | |
| 49 | 116198-13 | FUSE, SLOW BLOWING | |
| 50 | 116198-11 | FUSE, SLOW BLOWING | |

5900 FRAME (CONT.)

| ITEM NO. | PART NO. | DESCRIPTION | SYMBOL NO. |
|---|---|---|---|
| 51 | CL-211164 | PANEL, TRIM | |
| 52 | CL-210430-0218 | SCREW, PANEL | |
| 53 | CL-611578 | ** CABLE ASSY. (PREMIMUM FRAME ONLY) | |

* FOR STANDARD FRAME ONLY - SEE FIGURE 6-3 FOR PREMIMUM FRAME

** FOR PREMIMUM FRAME ONLY

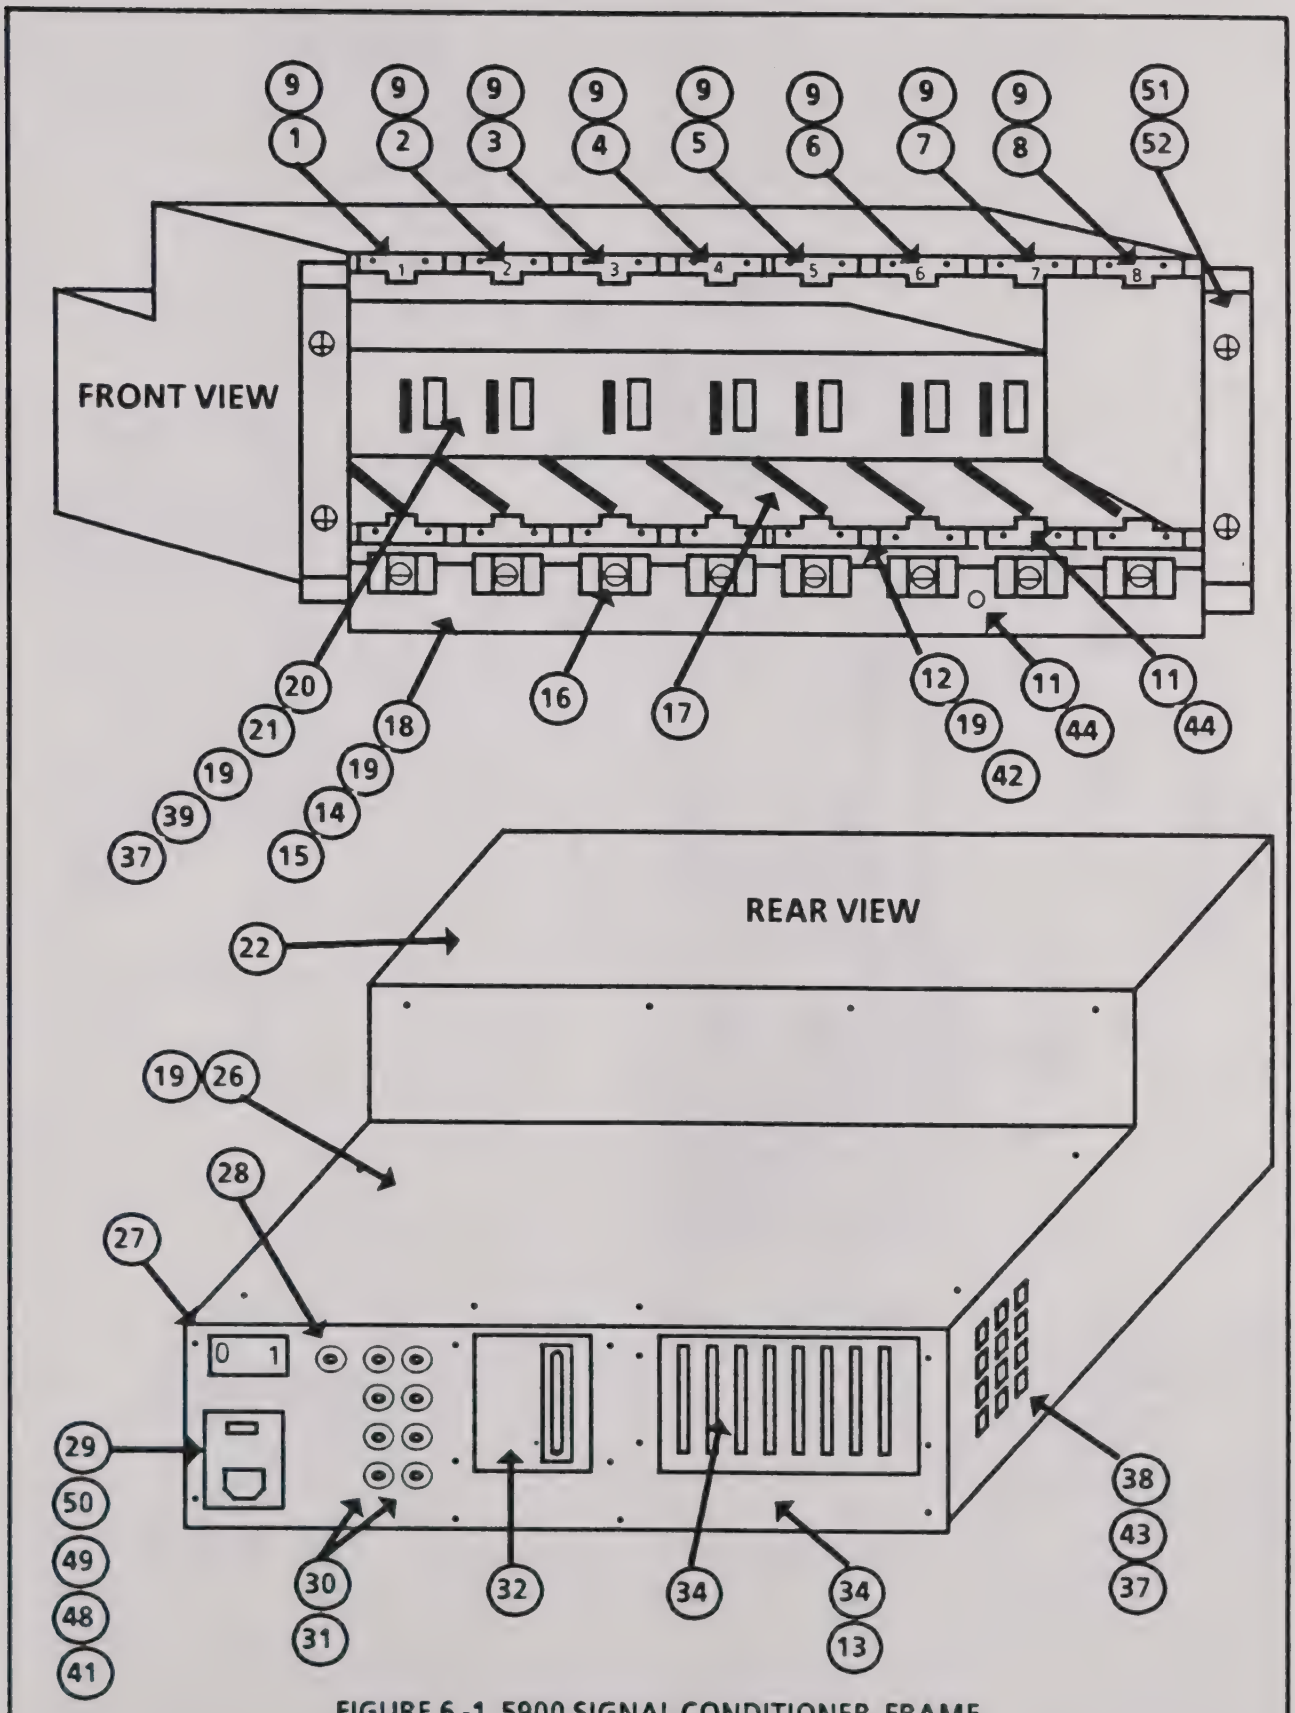


FIGURE 6 -1 5900 SIGNAL CONDITIONER FRAME

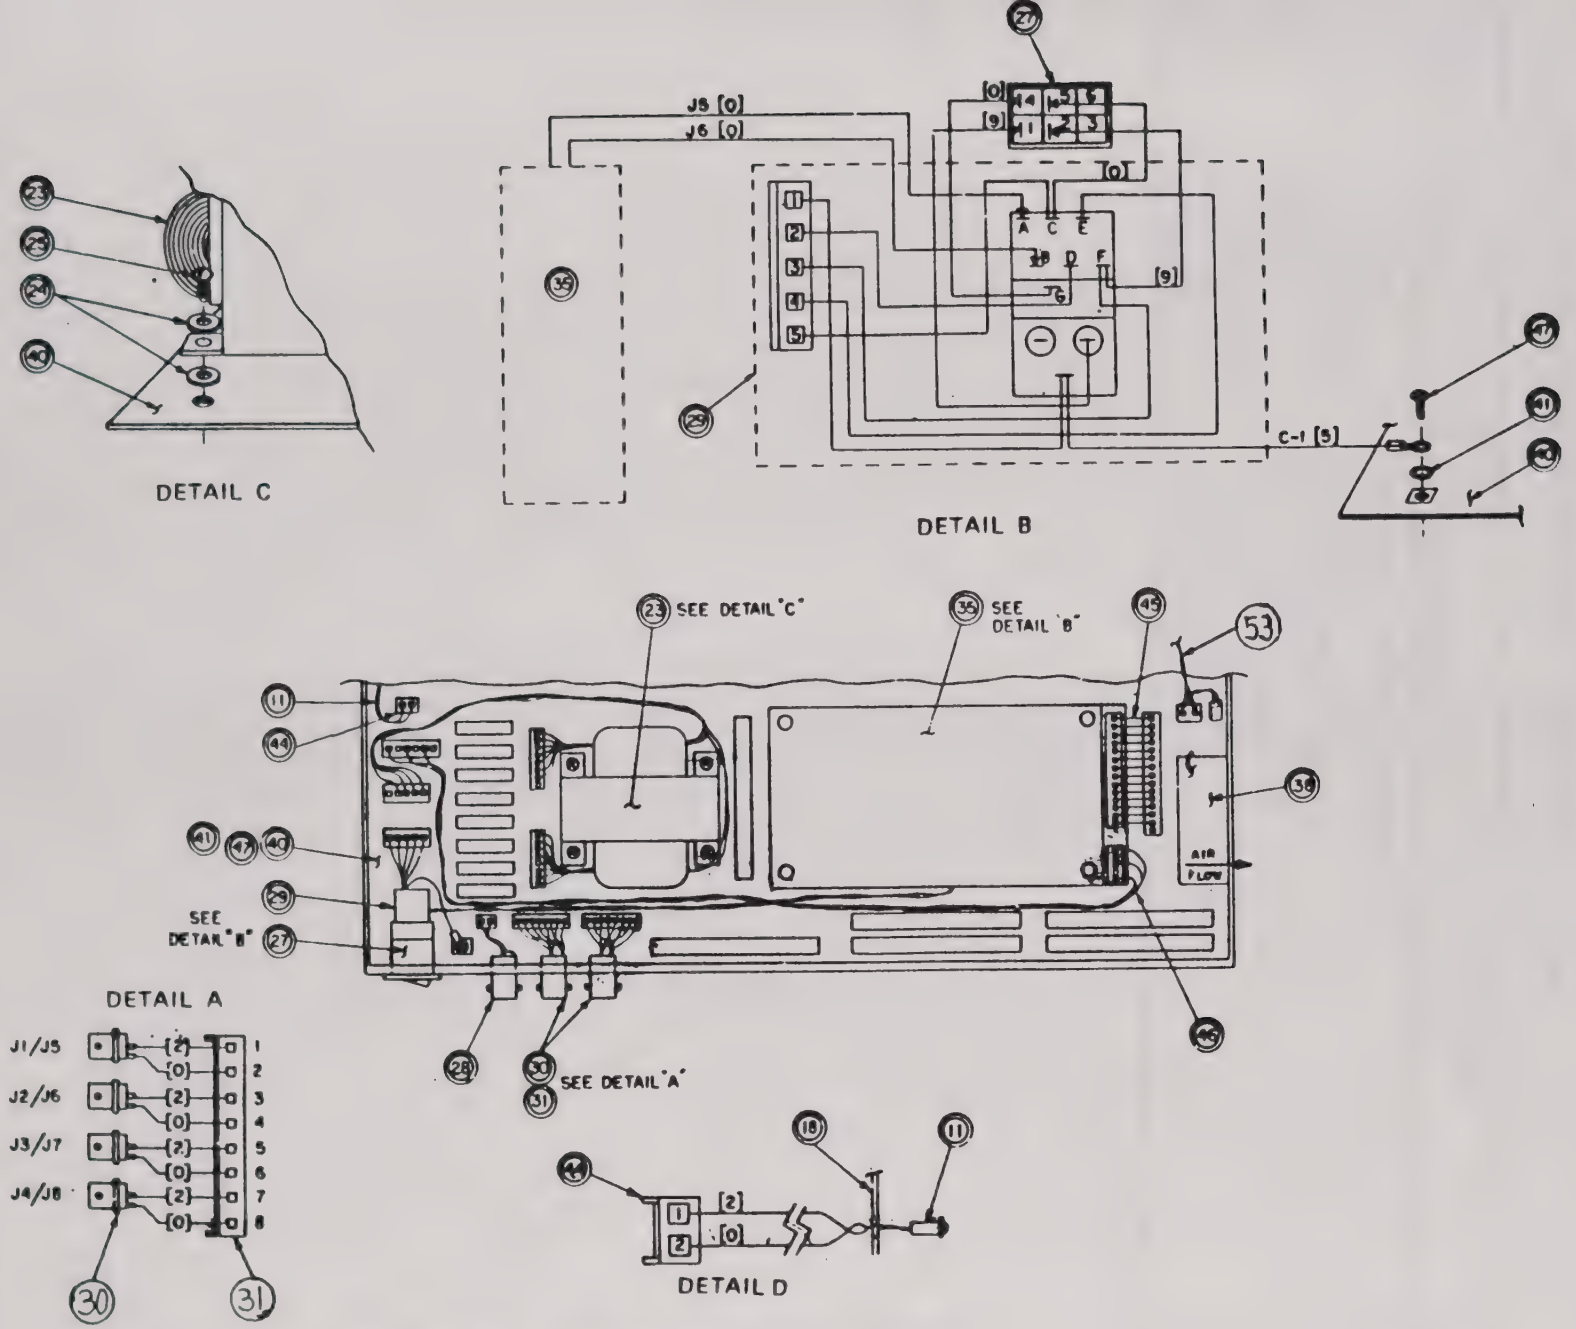


FIGURE 6 - 2 5900 FRAME (INSIDE VIEW)

SHELF ASSY., BOTTOM (PREMIMUM FRAME ONLY), PART NUMBER CL-811594
FIGURE 6-3

| ITEM NO. | PART NO. | DESCRIPTION | SYMBOL NO. |
|---|---|---|---|
| 1 | CL-811122 | SHELF SUBASSY., BOTTOM | |
| 2 | CL-711579 | FAN ASSY. | |
| 3 | 31-119920-4014 | SCREW, MACH. FLAT HD. | |
| 4 | 243898-40 | NUT ASSY. | |
| 5 | 1-265814-2 | TERMINAL BLOCK | |
| 6 | 31-119920-4006 | SCREW, MACH. | |
| 7 | 270903-11 | CLAMP, CABLE | |
| 8 | CL-711578 | CABLE ASSY., FAN | |

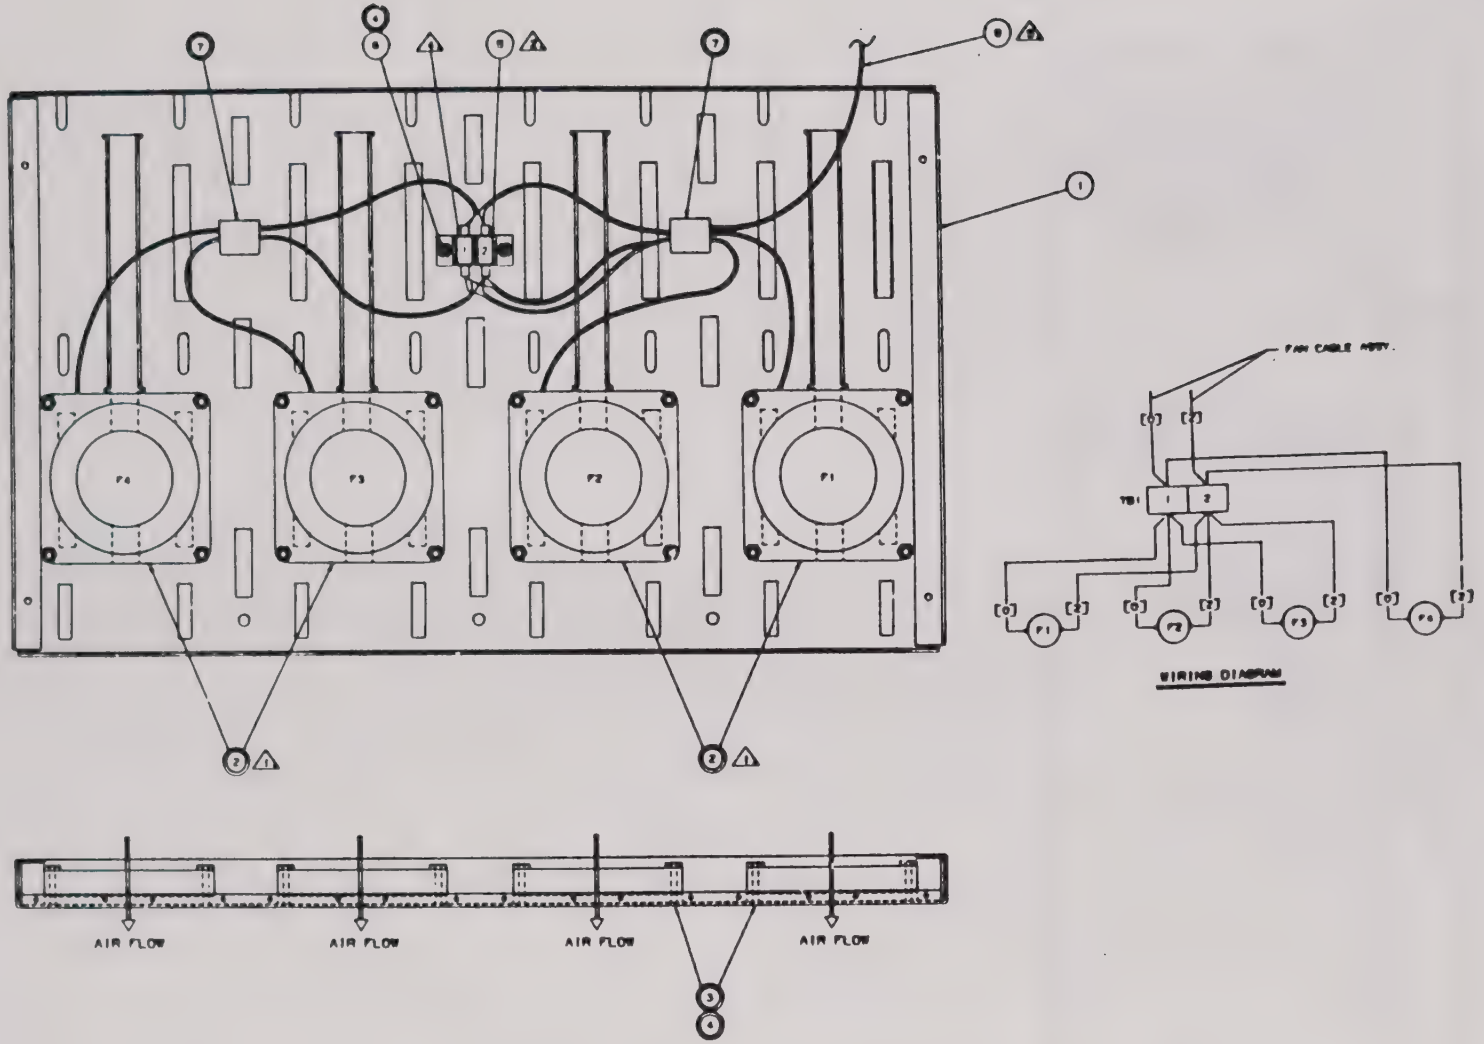


FIGURE 6 - 3 SHELF ASSY., BOTTOM (PREMIMUM FRAME ONLY)

MOTHER BOARD, PART NUMBER 897581
FIGURE 6-4

| ITEM NO. | PART NO. | DESCRIPTION | SYMBOL NO. |
|---|---|---|---|
| 1 | 497581 | ^BOARD, P.C. | |
| 2 | CL-210434-8 | CONNECTOR, P.C., EDGE | J11-J18 |
| 3 | CL-210209-48 | CONNECTOR, SOCKET, DIN | J21-J28 |
| 4 | CL-210285-96 | CONNECTOR, PLUG, DIN | P31-P34 |
| 5 | 1-123253-802 | SPACER, THREADED | |
| 6 | 31-119918-4008 | SCREW | |
| 7 | 31-119918-2605 | SCREW | |
| 8 | 31-119918-2607 | SCREW | |
| 9 | 31-119998-26 | NUT | |
| 10 | 343606-1612 | LABEL | |

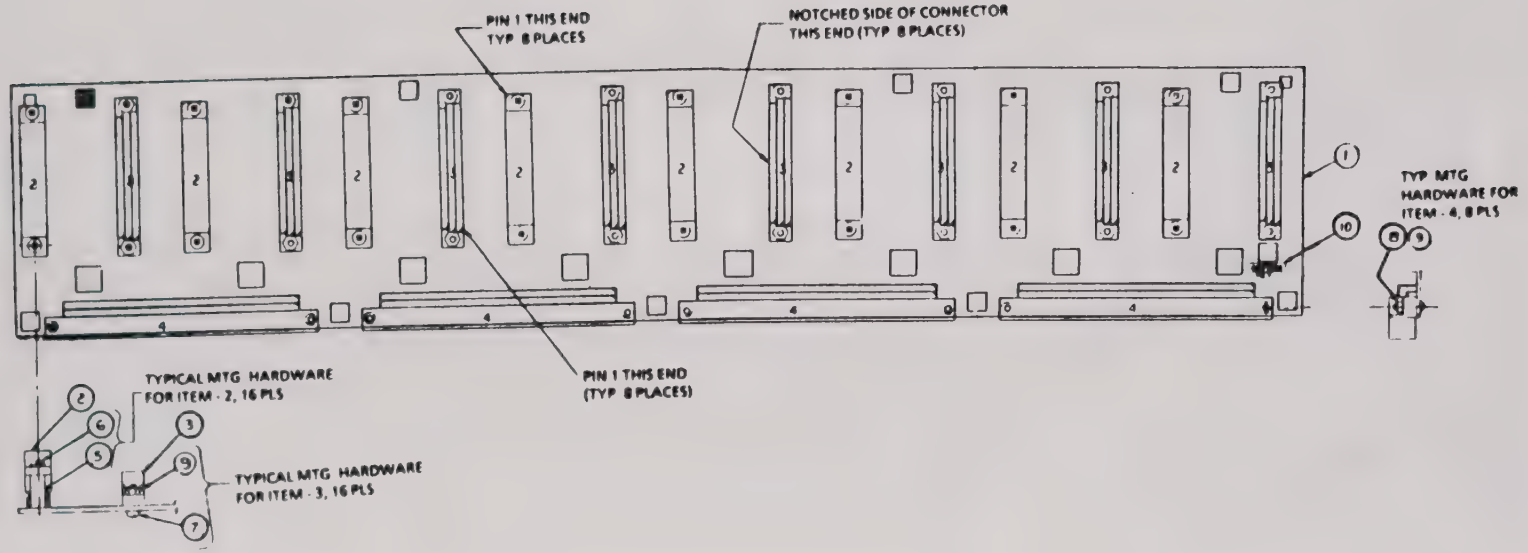


**FIGURE 6 - 4 MOTHER BOARD**

DISTRIBUTION BOARD, PART NUMBER 897582
FIGURE 6-5

| ITEM NO. | PART NO. | DESCRIPTION | SYMBOL NO. |
|---|---|---|---|
| 1 | 497582 | ^BOARD, P.C. | |
| 2 | CL-210209-96 | CONNECTOR, SOCKET | J31-J34,J41,J42,J51 |
| 3 | CL-210959-96 | CONNECTOR, PLUG | P61,P64,P91 |
| 4 | 281711-5 | CONNECTOR, MALE | P71,P72 |
| 5 | 1-293983-8 | CONNECTOR, MALE | P74,P75,P81 |
| 6 | 281711-15 | CONNECTOR, MALE | P76 |
| 7 | 1-293983-2 | CONNECTOR, MALE | P77,P78,P83 |
| 8 | 102625-7 | FUSE, TYPE 3AG | F1-F8 |
| 9 | 269256-7 | DIODE | CR1,CR2 |
| 10 | 5-241111-181 | RESISTOR, 180 OHM | R1 |
| 11 | 31-119918-2605 | SCREW | |
| 12 | 31-119998-26 | NUT | |
| 13 | 285577 | FUSE CLIPS | |
| 14 | 343606-1316 | LABEL | |
| 15 | 281711-6 | CONNECTOR, MALE | P73 |

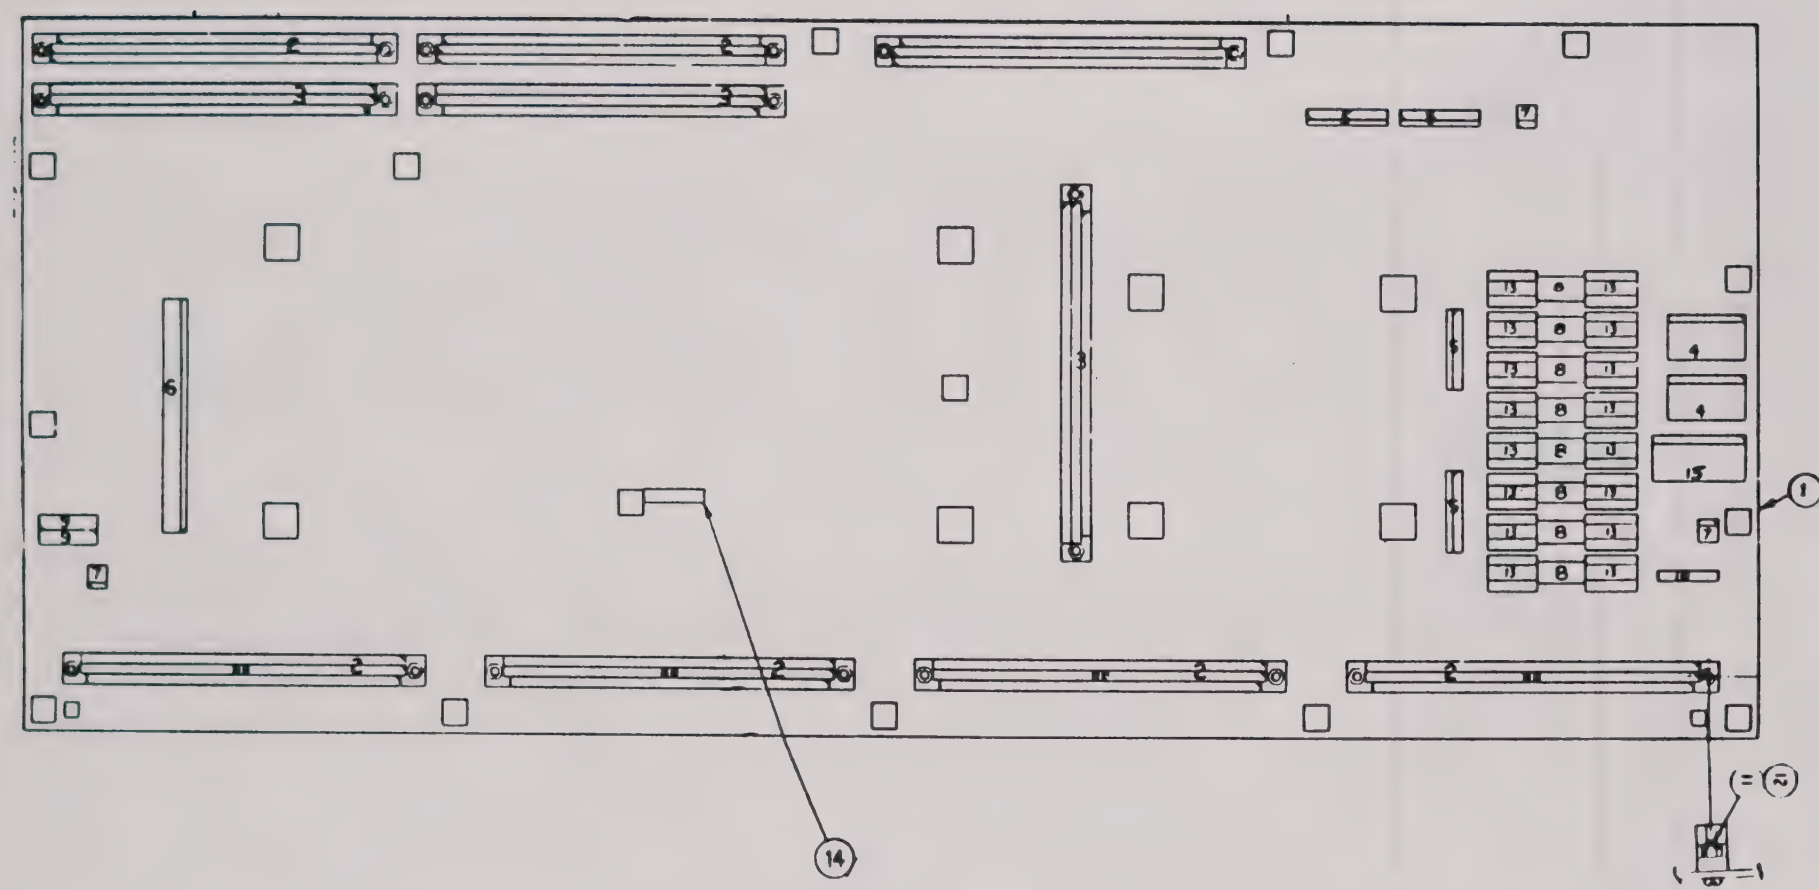

FIGURE 6 - 5 DISTRIBUTION BOARD

TRANSFORMER ASSEMBLY, PART NUMBER CL-210993
FIGURE 6-6

| ITEM NO. | PART NO. | DESCRIPTION | SYMBOL NO. |
|---|---|---|---|
| 1 | 9-281501-5 | CONNECTOR HOUSING, FEMALE | |
| 2 | 281506-2 | CONTACT, MALE | |
| 3 | 232997-23 | STRAP, RETAINING CABLE | |
| 4 | 293994-8 | CONNECTOR HOUSING, FEMALE | |
| 5 | 4-287490 | CONTACT, MALE | |

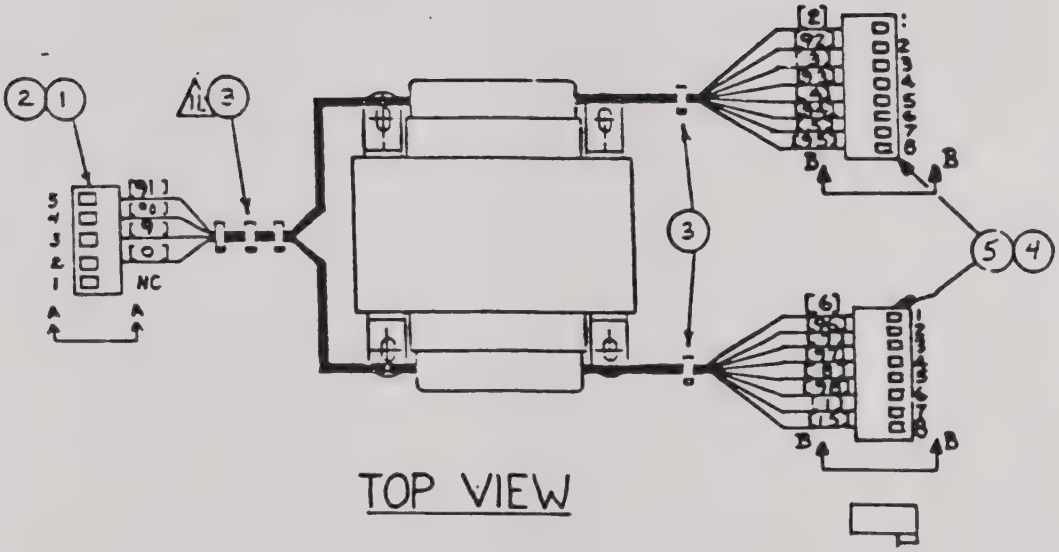


FIGURE 6 - 6 TRANSFORMER ASSEMBLY

3000 RECORDER INTERFACE KIT OPTION, MODEL NUMBER 11-4221-06
FIGURE 6-7

| ITEM NO. | PART NO. | DESCRIPTION | SYMBOL NO. |
|---|---|---|---|
| 1 | 897939 | BD. ASSY, RECORDER INTFC | |
| 2 | 343606-1634 | ^LABEL | |
| 3 | 13-262716-6206 | SCREW, SELF TAPPING, PAN HEAD | |

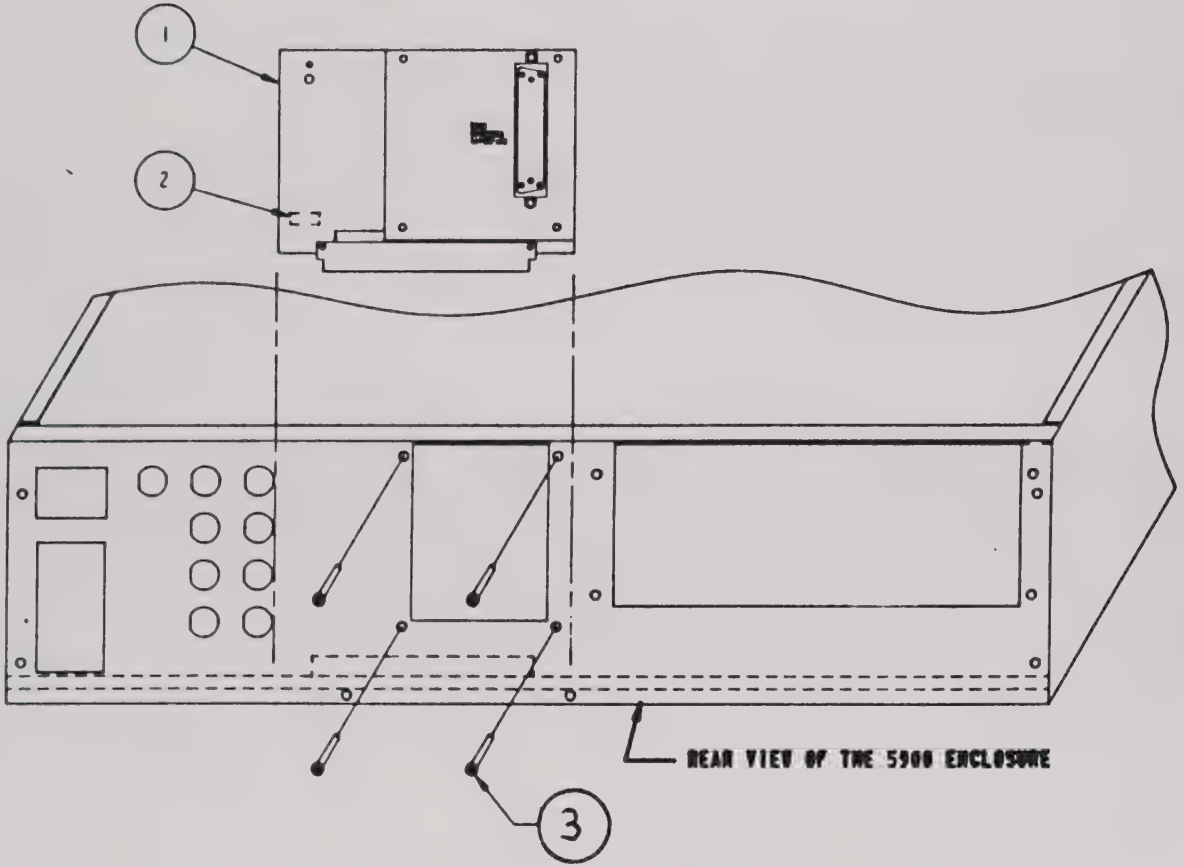


FIGURE 6 - 7 3000 RECORDER INTERFACE KIT

MEDICAL BOARD KIT OPTION, MODEL NUMBER 11-4221-02
FIGURE 6-8

| ITEM NO. | PART NO. | DESCRIPTION | SYMBOL NO. |
|---|---|---|---|
| 1 | 897937 | BOARD ASSY., AUX. ANNAL | |
| 2 | 343606 | ^LABEL | |
| 3 | 13-262716-6206 | SCREW, SELF TAPPING, PAN HEAD | |
| 4 | 13-262716-6208 | SCREW, SELF TAPPING, PAN HEAD | |

MP MASTER
MA34621